

DIRECTIONAL LIGHTS DL-04 SERIES

SPECIFICATIONS

CONSTRUCTION: Extruded aluminum, roll-formed stamped brass, copper or stainless steel, with corresponding cast adjustable swivel (copper has cast brass swivel)

REFLECTOR: Diamond embossed specular aluminum

LAMP: 18 watt S-8 single contact S-8 #1141; 1200 hours average rating (35w max.)

SOCKET: Single contact bayonet, brass nickel plated screw shell (Ba15s);

double contact bayonet base (Ba15d) for 120v., both with 200° C silicone lead wires

WIRING: Black 3 foot 18/2 zip cord

CONNECTION: FA-05 Quick Connector (not supplied) from fixture to main cable (12/2,

10/2 or 8/2 only)


HOOD EXTENSION: Heavy-duty stamped aluminum **MOUNTING:** FA-03 9" ABS stake threaded 1/2" NPS

FINISH: Optional finishes available




ORDERING INFORMATION

CATALOG NO.	DESCRIPTION	EST. SHIP. WEIGHT							
DL-04	3.5" extruded aluminum floodlight with high-impact clear acrylic lens	2.0 lbs.							
DL-04-HE DL-04-BRS DL-04-COP DL-04-SS	Same as DL-04 but with Hood Extension 3.5" brass floodlight with glass lens and brass swivel 3.5" copper floodlight with glass lens and brass swivel 3.5" stainless steel floodlight with glass lens and stainless steel swivel	2.0 lbs. 4.0 lbs. 2.0 lbs. 2.0 lbs.							

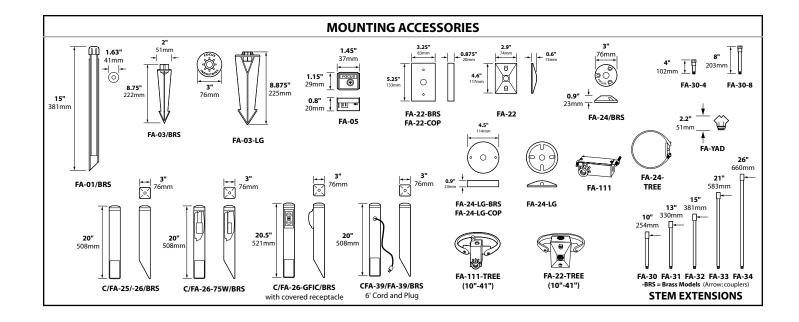

BEAM/GLARE CONTROL ACCESSORIES

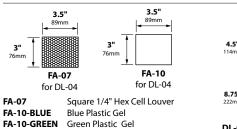

12v. fixtures: 25 foot 16/2 fixture lead wire available; add **-25F** to catalog number. For use with Focus CPC or hub supplied by others.

DL-04-COP/-BRS/-SS

JOB INFORMATION							
Туре:							
Job Name:							
Cat. No.:							
Lamp(s):							
Specifier:							
Contractor:							
Notes:							

IOR INFORMATION

П		
	FOCUS INDUSTRIES INC.	www.focusindustries.com
ı	25301 COMMERCENTRE DRIVE	sales@focusindustries.com
	LAKE FOREST, CA 92630	(949) 830-1350 • FAX (949) 830-3390

Date:


FSA-00


Powder Coat Finishes	Black Texture (Standard)	Antique Verde	Bronze Texture	Camel	White Texture	Hunter Texture	Rust	Weathered Iron	Weathered Brown	Stucco	Rubbed Verde	Chrome Powder	Terra Cotta
Ordering Code	-BLT	-ATV	-BRT	-CAM	-WTX	-HTX	-RST	-WIR	-WBR	-STU	-RBV	-CPR	-TRC


8.75" 222mm




LIGHT DISTRIBUTIONS AND PHOTOMETRICS

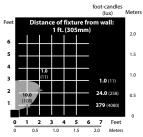

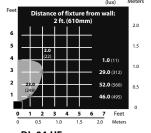


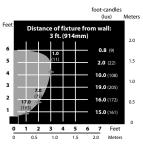


DL-04-HE Half Spread Photometrics

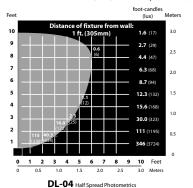

DL-04-HE Half Spread Pho

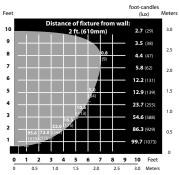

DL-04-HE Half Spread Photo

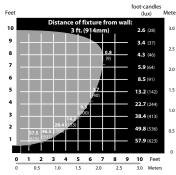

DL-04 Half Spread Photometrics

FOCUS INDUSTRIES


INSTALLATION INSTRUCTIONS (12V)

DL-04 Half Spread Photometrics

FOR ALL 12V DIRECTIONAL FIXTURES

Inspected by

- 1) Thread Mounting device onto base of fixture. If using FA-03, press into ground & connect to main cable using FA-05 Quick Connector. (See Instructions). If using FA-02 or -04 same as above. If using FA-01, make sure the base PVC is free of dirt/debris to allow the inner tube to be adjusted as needed. A set screw is provided to set desired height. If using FA-25, you must dig a 10-12" dia. hole, 12-16" deep. Loop main cable into stake or run fixture wire out of bottom to main cable, make connection with FA-05 then back fill hole & wiring. If using FA-22, -23, -24, -24-LG canopies, secure with appropriate screws for mounting surface.
- 2) To re-lamp DL-01, 2, 2EC, 13, remove 2 Phillips head screws from lens cap. Pull MR-16 lamp out by the glass reflector, NOT center bulb. Insert/press new MR16 into socket. Carefully assemble lens cap & gasket on body aligning locator pin on cap with locator hole on body. Before tightening screws on cap, make sure gasket seats between body & cap. No gaps or holes. This will insure a weatherproof seal. DL-13, DL-20-MR16 have no gaskets. They have a slip fit & only one set screw for removal. Center lamp & align drain hole before tightening.
- 3) To re-lamp DL-03, twist retaining ring & removing, releasing the lamp. Disconnect terminal connectors from back of PAR36 bulb. Reverse procedure to install light bulb. DL-03 is supplied with light bulb installed.

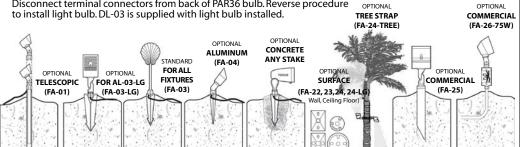

NOTE: All mounting stakes can be pressed or hammered into the ground with a standard hammer or rubber mallet. A small block of wood is recommended to give you a larger surface to pound. Always leave the top 1" section of the stake above ground to help isolate the metal from potentially corrosive soils. Fixture wire (18/2) should be buried underground to prevent detachment & have a cleaner look. For a more permanent mount, you can set the stake in concrete or use FA-25 commercial mounting pedestal.

- 4) To re-lamp DL-04,-H remove 2 Phillips head screws on left end plate. Rotate end plate down. Slide lens out. For S-8 lamp press and rotate counter clockwise, lamp will release. For T-3 or T-4 hologen, pull light bulb away from socket ot release. To lamp you must align pins with socket for proper contact. The above fixtures are supplied with lamp installed & tested.
- 5) To re-lamp DL-05, press & rotate ALR12 lamp counter clockwise to release. It is recommended to lubricate lamp base w/petroleum jelly.
- 6) To re-lamp DL-06-NL, same as above but light bulbs will be ALR-12, ALR-18, or AR-70. Use same procedure as above. Lamp NOT installed.
- 7) To re-lamp DL-07, 8, 9, 11, 12, remove 2 Phillips head screws that retains clear lens. For S-8 lamp, press & rotate lamp counter clockwise. Lamp will release. For T-3 halogen pull light bulb away from socket to release. Above fixtures have lamp installed.
- 8) To re-lamp DL-21, loosen slotted set screw on bottom of cap. Hold body & cap with each hand. Pull & rotate to separate. Follow DL-01 re-lamping procedures above. Note ALL MR-16 fixtures are supplied in separate boxes to avoid damage in shipping. Bulbs are NOT installed.

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE AND INJURY TO PERSONS:

- 1) Lamp gets hot quickly; turn off/unplug/ disconnect and allow to cool down before replacing the bulb.
- 2) DO NOT touch hot lens, guard or enclosure
- 3) DO NOT look into lamp when on
- 4) Keep lamp away from materials that may
- 5)Use only with wattage/lamp marked on fixture warning or instructions.
- 6) Use right light bulb base w/right socket
- DO NOT touch the lamp at any time. Use a lint-free cloth when handling bulb as oil from skin may damage lamp and shorten lamp life.
- DO NOT operate fixture with missing/damaged shield.