

# **DIRECTIONAL LIGHTS**

# **DL-16 SERIES**

# **SPECIFICATIONS**

CONSTRUCTION: Cast aluminum body and cover; adjustable cast aluminum swivel

**REFLECTOR:** Diamond embossed high performance aluminum

GASKET: Black 1/16" silicone **LENS:** Tempered clear glass

**SOCKET:** Medium base high temperature ceramic 600 volts, 660 watts 4 K.V. pulse rated. Brass nickel-plate

screw shell with 150°C lead wires

**LAMP:** None. Designed for ED-17 type, medium base

WIRING: Standard 120v., black, white and ground, 9" leads; 18 gauge 200° C silicone

OPTIONAL INPUT VOLTAGES: For 208, 240, or 277 volt, consult factory


MOUNTING: None supplied; FA-26 recommended.

FINISH: Standard black texture polyester powder coat-optional finishes available




#### ORDERING INFORMATION

CATALOG NO.	DESCRIPTION	MAX.WATTAGE	EST. SHIP. WEIGHT	
High Pressure Sodiur	m (HPS):			
DL-16-NL-HPS-35	HPS cast aluminum flood light	35w	16 lbs.	
L-16-NL-HPS-50	HPS cast aluminum flood light	50w	16 lbs.	
L-16-NL-HPS-70	HPS cast aluminum flood light	70w	16 lbs.	
DL-16-NL-HPS-100	HPS cast aluminum flood light	100w	16 lbs.	7.5" 3.5" 11"
DL-16-NL-HPS-150	HPS cast aluminum flood light	150w	16 lbs.	191mm 89mm 279mm
Mercury Vapor (MV):				FOCUS
L-16-NL-MV-50	MV cast aluminum flood light	50w	16 lbs.	/ 8"       203mm
L-16-NL-MV-75	MV cast aluminum flood light	75w	16 lbs.	
L-16-NL-MV-100	MV cast aluminum flood light	100w	16 lbs.	4.1"
Metal Halide (MH)	_			104mm V
L-16-NL-MH-50	MH cast aluminum flood light	50w	16 lbs.	DL-16-NL-HPS/MV/MH
L-16-NL-MH-70	MH cast aluminum flood light	70w	16 lbs.	
L-16-NL-MH-100	MH cast aluminum flood light	100w	16 lbs.	
L-16-NL-MH-150	MH cast aluminum flood light	150w	16 lbs.	MTERTE
DL-16-NL-MH-175	MH cast aluminum flood light	175w	16 lbs.	
				درای

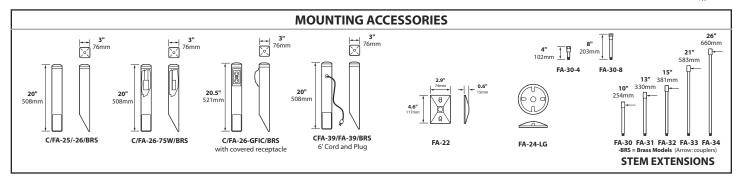

# **BEAM/GLARE CONTROL ACCESSORIES**

FA-07-16 1/4" Mini Hex Louver

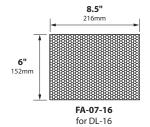

12v. fixtures: 25 foot 16/2 fixture lead wire available; add -25F to catalog number. For usewith Focus CPC or hub supplied by others.

JOB INFORMATION	
Туре:	Date:
Job Name:	
Cat. No.:	
Lamp(s):	
Specifier:	
Contractor:	
Notes:	
FOCUS INDUSTRIES INC. 25301 COMMERCENTRE DRIVE LAKE FOREST, CA 92630	www.focusindustries.com sales@focusindustries.com (949) 830-1350 • FAX (949) 830-3390

FSA-00

. 5/1 00													
Powder Coat Finishes	Black Texture (Standard)	Antique Verde	Bronze Texture	Camel	White Texture	Hunter Texture	Rust	Weathered Iron	Weathered Brown	Stucco	Rubbed Verde	Chrome Powder	Terra Cotta
Orderina Code	-BLT	-ATV	-BRT	-CAM	-WTX	-HTX	-RST	-WIR	-WBR	-STU	-RRV	-CPR	-TRC






# **INSTALLATION INSTRUCTIONS**

DL-20, -30, -38 Series Incandescent Bullet Directional Lights 120v

Inspected by

- 1. Make sure electrical supply power is shut off at circuit breaker before starting fixture installation or servicing of fixture.
- 2. Using thread sealant, thread fixture onto junction box or other mounting device (not supplied) until it is at desire direction. Tighten provided lock nut to ensure that the fixture is firmly lock to adjusted position.
- Attach fixture leads to line in leads observing polarity (black to black, white to white, green to ground) using approved silicone-filled safety wire connectors.
- Attach junction box cover plate to junction box (not supplied). Make sure wires are not pinched between junction box cover and junction box and gasket seats flush.

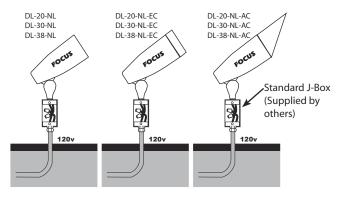


### LAMP INSTALLATION/REPLACEMENT:

# CAUTION: Do not exceed maximum wattage marked on fixture label.

- 1. To prevent electrical shock, disconnect fixture from electrical power supply before servicing.
- 2. Loosen shroud thumb screw (if present).

- 5. Coat exposed fixture threads with thread sealant to prevent moisture from entering junction box or other mounting device.
- 6.To adjust fixture aiming angle, loosen swivel screw. Do not remove completely. Hold fixture at selected angle and tighten swivel screw firmly with #2 Phillips screw driver.
- 7. Install lamp, refer to section below.
- 8.To install shroud, loosen shroud thumb screw (if present). Turn shroud collar in a circular motion while sliding shroud into housing. Do not push straight into the housing to prevent O-ring from slipping out of it's groove. Secure shroud to body with thumb screw.
- 9. Coat all exposed screw with silicone grease.
- 10. Turn on power to the fixture and check for proper operation.

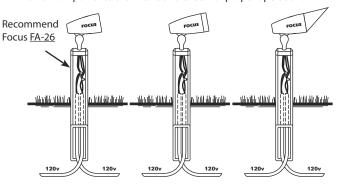

- 3. Remove shroud to expose lamp.
- 4. Replace lamp with correct wattage and type marked on fixture label. Use lamp designed for medium base 120v PAR lamps.
- 5. Re-install shroud. Turn shroud in a circular motion while sliding into housing. Do not push straight into the housing to prevent O-ring from slipping out of it's groove. Tighten shroud thumb screw.

NOTE: Must be installed by a licensed electrician per local codes. For Questions Call 1-888-882-1350