



FLUORESCENT LIGHTS

CFL-24, CFL-39, CFL-54-T5HO-SERIES

SPECIFICATIONS

CONSTRUCTION: Black ABS housing with 2 injection molded adjustable swivels and end plates

REFLECTOR: Highly polished specular aluminum

 
 
LENS: High-impact clear acrylic

BALLAST: 120/230/277 volt, Type 1 Outdoor, high-frequency electronic

WIRING: Standard 120 volt, black, white and ground

MOUNTING: None supplied, CFA-26 Pedestal recommended. See Mounting Accessories below

FINISH: Black, optional Rubbed Verde finish available

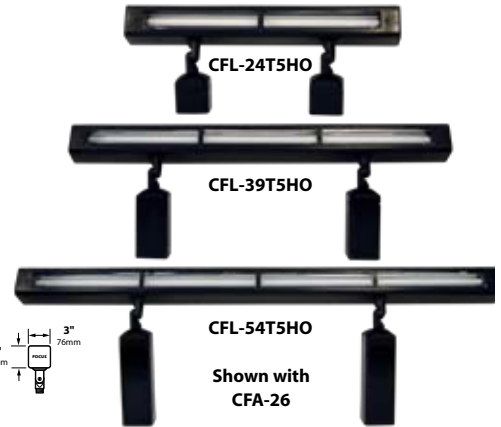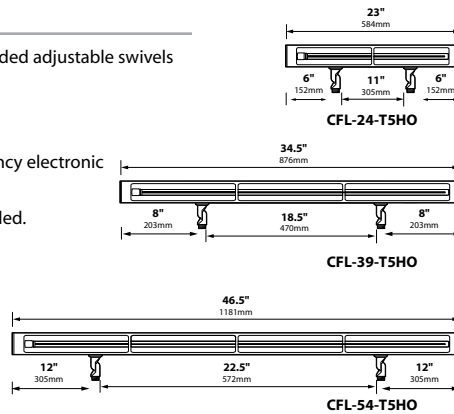


ORDERING INFORMATION

CATALOG NO.	DESCRIPTION	WATTAGE	LAMP SUPPLIED	STANDARD FINISH	EST. SHIP. WEIGHT
CFL-24-T5HO-30K	24" Black ABS housing floodlight, 120v.	24w	1 x 24 watt (30°K)	Black	4.0 lbs.
CFL-24-T5HO-35K	24" Black ABS housing floodlight, 120v.	24w	1 x 24 watt (35°K)	Black	4.0 lbs.
CFL-24-T5HO-41K	24" Black ABS housing floodlight, 120v.	24w	1 x 24 watt (41°K)	Black	4.0 lbs.
CFL-39-T5HO-30K	35" Black ABS housing floodlight, 120v.	39w	1 x 39 watt (30°K)	Black	8.0 lbs.
CFL-39-T5HO-35K	35" Black ABS housing floodlight, 120v.	39w	1 x 39 watt (35°K)	Black	8.0 lbs.
CFL-39-T5HO-41K	35" Black ABS housing floodlight, 120v.	39w	1 x 39 watt (41°K)	Black	8.0 lbs.
CFL-54-T5HO-30K	47" Black ABS housing floodlight, 120v.	54w	1 x 54 watt (30°K)	Black	13.0 lbs.
CFL-54-T5HO-35K	47" Black ABS housing floodlight, 120v.	54w	1 x 54 watt (35°K)	Black	13.0 lbs.
CFL-54-T5HO-41K	47" Black ABS housing floodlight, 120v.	54w	1 x 54 watt (41°K)	Black	13.0 lbs.
CFL-54-T5HO-50K	47" Black ABS housing floodlight, 120v.	54w	1 x 54 watt (50°K)	Black	13.0 lbs.




 MOUNTING ACCESSORIES

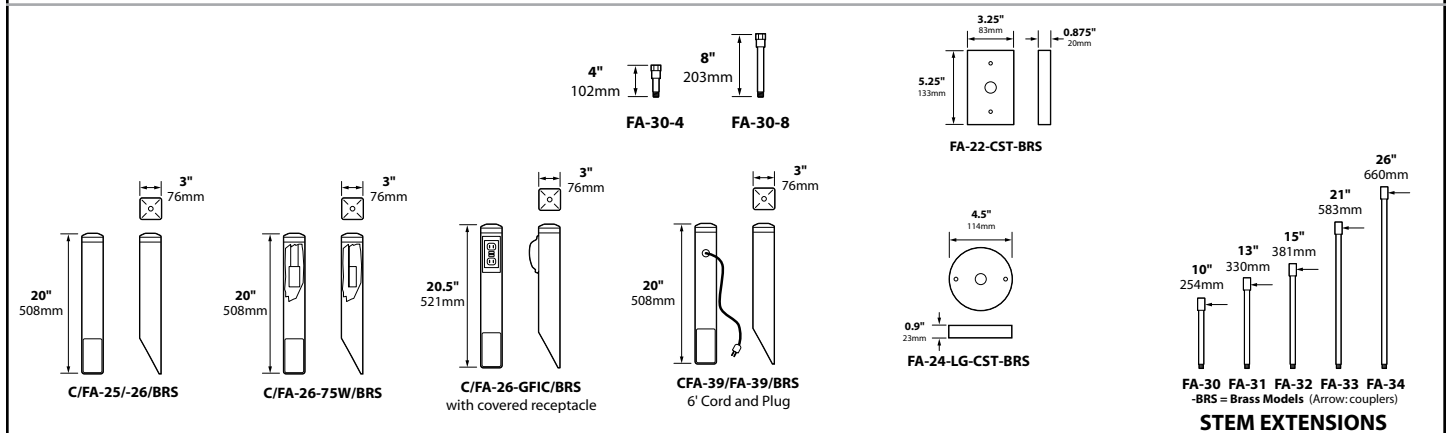

BEAM/GLARE CONTROL ACCESSORIES

 - CFA-06-24** 24" long, 1/4" Mini Hex Cell Louver for CFL-24
- CFA-06-35** 35" long, 1/4" Mini Hex Cell Louver for CFL-39
- CFA-06-47** 47" long, 1/4" Mini Hex Cell Louver for CFL-54
- FA-68-24** Aluminum Hood Extension for CFL-24
- FA-68-39** Aluminum Hood Extension for CFL-39
- FA-68-54** Aluminum Hood Extension for CFL-54



JOB INFORMATION

Type: _____ Date: _____

Job Name: _____

Cat. No.: _____

Lamp(s): _____

Specifier: _____

Contractor: _____

Notes: _____


FOCUS INDUSTRIES INC.®
25301 COMMERCENTRE DRIVE
LAKE FOREST, CA 92630

www.focusindustries.com
sales@focusindustries.com
(949) 830-1350 • FAX (949) 830-3390


Powder Coat Finishes	Black Texture (Standard)	Antique Verde	Bronze Texture	Camel	White Texture	Hunter Texture	Rust	Weathered Iron	Weathered Brown	Stucco	Rubbed Verde	Chrome Powder	Terra Cotta
Ordering Code	-BLT	-ATV	-BRT	-CAM	-WTX	-HTX	-RST	-WIR	-WBR	-STU	-RBV	-CPR	-TRC



 
LIGHT DISTRIBUTIONS AND PHOTOMETRICS

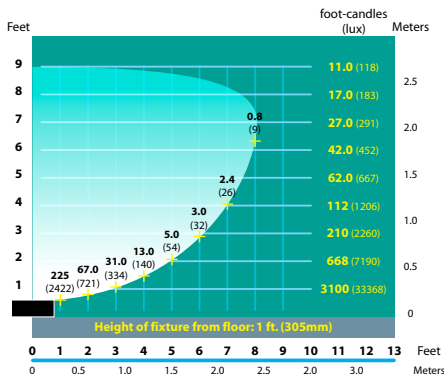


FFL-24T5HO Half Spread Photometrics

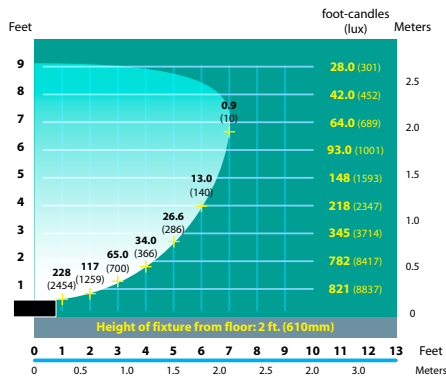 


FFL-24T5HO Half Spread Photometrics

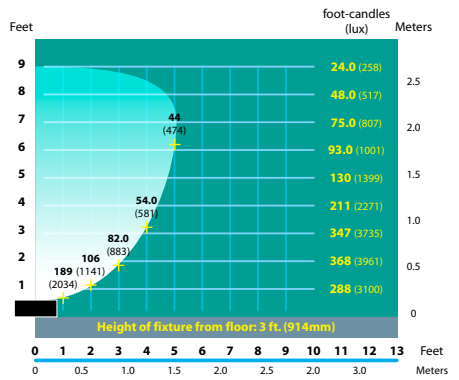 


FFL-24T5HO Half Spread Photometrics

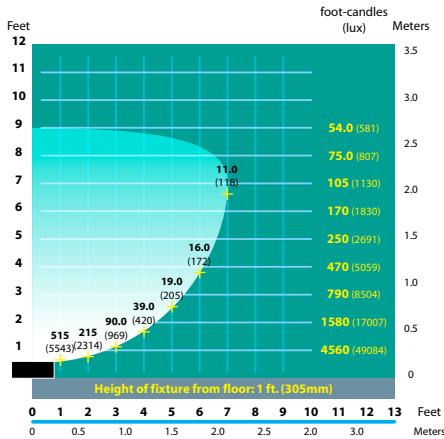 


FFL-39T5HO Half Spread Photometrics

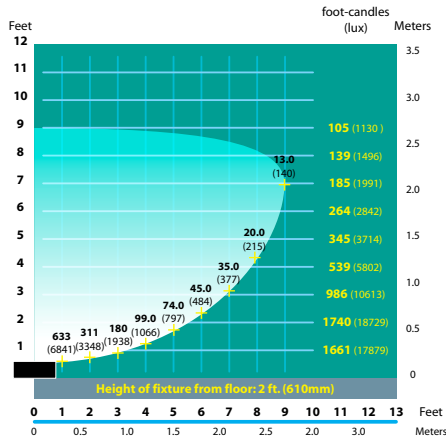 


FFL-39T5HO Half Spread Photometrics

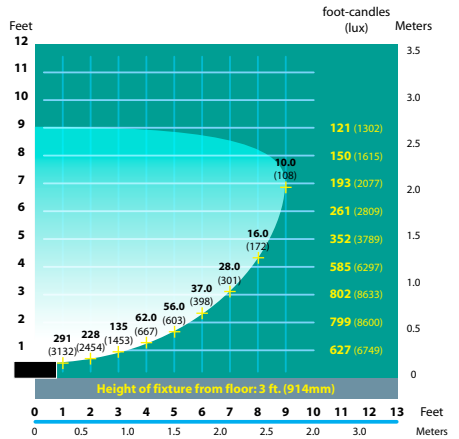 


FFL-39T5HO Half Spread Photometrics

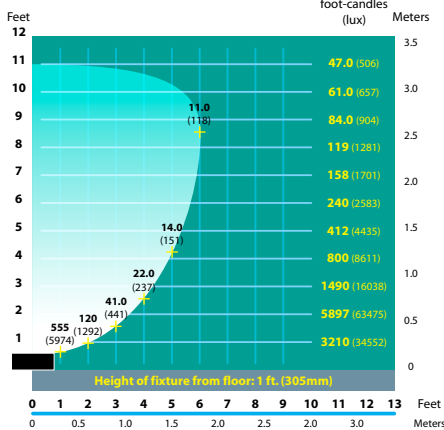 

FFL-54T5HO Half Spread Photometrics

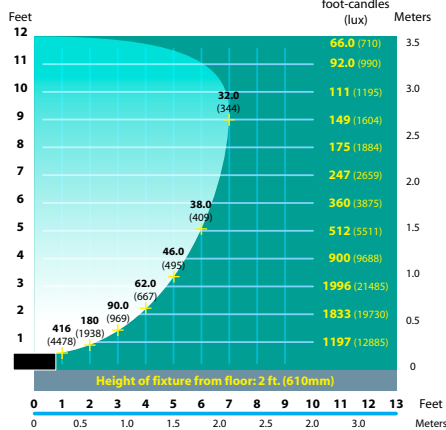 

FFL-54T5HO Half Spread Photometrics

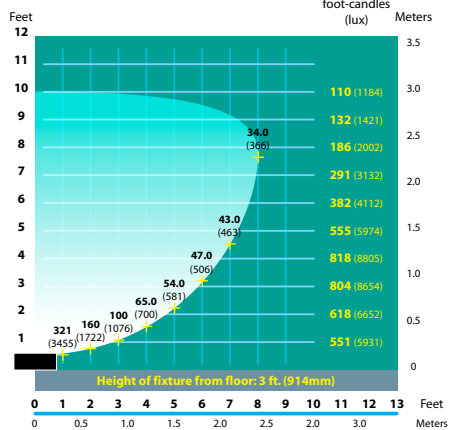 

FFL-54T5HO Half Spread Photometrics



 
FOCUS™
INDUSTRIES

INSTALLATION INSTRUCTIONS

Compact Fluorescent Flood Lights (120v. and 277v.)

Inspected by

1. Make sure electrical supply power is shut off at circuit breaker before starting fixture installation or servicing of fixture.
2. Using thread sealant, thread fixture onto junction box or other mounting device (not supplied) until it is at desired direction. Tighten provided lock nut to ensure that the fixture is firmly locked to adjusted position.
3. Attach fixture leads to line in leads observing polarity (black to black, white to white and green to ground) using approved silicone-filled safety wire connectors.
4. Attach junction box cover plate to junction box (not supplied). Make sure that wires are not pinched between junction box cover and junction box and gasket seats flush.
5. Coat exposed fixture threads with thread sealant to prevent moisture from entering junction box or other mounting device.
6. To adjust fixture aiming angle, loosen swivel screw. **Do not remove completely.** Hold fixture at selected angle and tighten swivel screw firmly with #2 Phillips screw driver.
7. Turn on power to the fixture and check for proper operation.

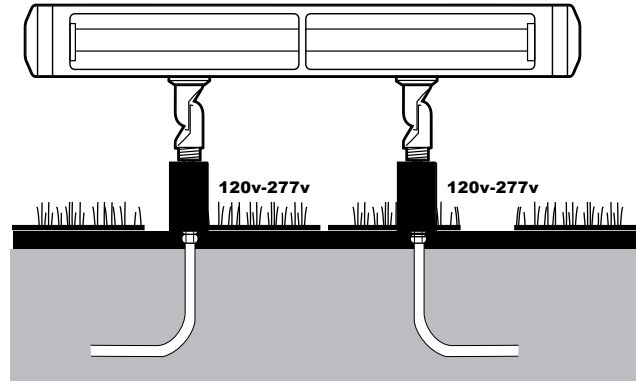

LAMP INSTALLATION/REPLACEMENT:

CAUTION: Do not exceed maximum wattage marked on fixture label.

1. To prevent electrical shock, turn off electrical power supply before servicing.
2. Remove 2 side plate screws and pivot side plate.
3. Slide lens outward to expose lamp.
4. Replace lamp with correct wattage and type marked on fixture label.
5. Re-install replace front lens & side plate screws.

**NOTE: Must be installed by a licensed electrician per local codes.
For Questions Call 1-888-882-1350**

For question call 1-800-882-1350