BRISK™ INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user-serviceable parts inside.

CAUTION: For proper weatherproof function all gaskets must be seated properly and all screws inserted and tightened important with an uneven wall surface. Silicone all plugs and unused conduit entries.

MOUNTING TO JUNCTION BOX/WALL

- 1. Loosen the Screws (2) and open the Housing.
- 2. Knock out appropriate slots in **Knockout Pattern**, secure to Junction Box (not supplied) with appropriate hardware. Check that gasket is fully sealed. Feed supply wires through Junction Box into Wall Mounting Box through Silicone Wiring Plug.
- 3. Alternatively, secure **Wall Mounting Box** to a sturdy wall. Use appropriate mounting hardware such as lag bolts and anchors with washers suitable for the mounting surface. Use Conduit Entries and conduit connectors. Wire the Housing leads to supply wires using UL listed wire connectors according to NEC and local codes.
- 4. Check that gasket is fully sealed. Silicone around the edge of Wall Mounting Box and/ or Junction Box.
- 5. Place wired Housing over the Wall Mounting Box, close and tighten the Screws. Check that door gasket is properly sealed.
- 6. Tighten Plugs and apply weatherproof silicone sealant to all unused conduit entry points. If outdoor surface is irregular, use caulk to seal any gaps around Wall Mounting Box.

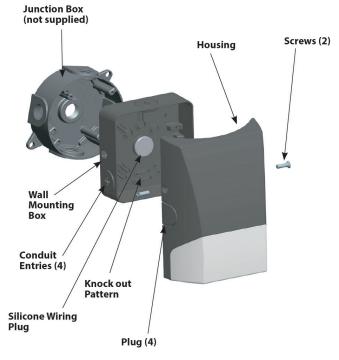


Fig. 1

PATENT - Pending: Pat. Pending

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



BRISK™ INSTALLATION INSTRUCTIONS

 


Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

ON-OFF WIRING

Universal voltage driver permits operation at 120V through 277V, 50 or 60 Hz. Units ordered with '/PCU' suffix operate at 120V through 277V. For Non-Dimming, follow the wiring directions as in Fig. 2.

- 1. Connect the BLACK fixture lead to the (+) LINE supply lead.
- 2. Connect the WHITE fixture lead to the (-) COMMON supply lead.
- 3. Connect the ground wire from fixture to supply ground.



CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean acrylic lens & fixture with non-abrasive cleaning solution.
- 2. Do not open fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

- 1. Check that the line voltage at fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?

PATENT - Pending: Pat. Pending

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers