

CAUTION: LED gets hot quickly.

Note: For use with 12V power unit.

Note: Fixtures to be used only with Juno TL Series Trac. Use with non-Juno Trac may create a safety hazard and voids the Juno warranty and the UL and CSA listings.

SAVE THESE INSTRUCTIONS

1. Insert adapter contacts into JUNO TL series Trac channel (Figure A).
2. Rotate adapter 90° in either direction until latch "snaps" into Trac channel (Figures B & C).
3. If fixture repositioning is necessary, slide (depress) latch out of Trac channel and rotate adapter free. Reposition and repeat steps 1 & 2.
4. Adjust fixture aiming angle(s) as needed. DO NOT force.

CAUTION: The optical lens in this fixture can be removed and replaced with a different optical lens accessory to change beam spread. **DO NOT REMOVE OR RE-INSTALL THE OPTICAL LENS WHEN FIXTURE IS HOT.** Always allow the fixture to cool before removing or installing the optical lens. The LED is fragile and may be damaged if these instructions are not followed. Juno Lighting Group is not responsible for damage caused by removing or installing the optical lens in a hot fixture.

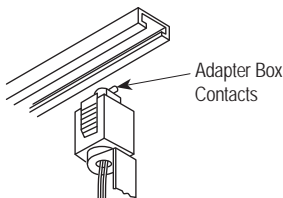


Figure A

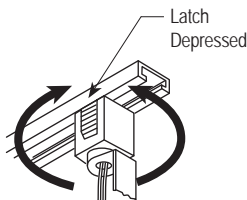


Figure B

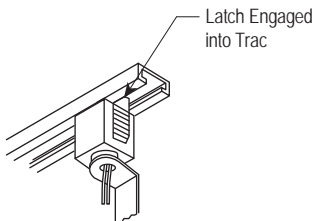


Figure C