

READ AND FOLLOW ALL SAFETY INSTRUCTIONS!
SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Installation and service of luminaires should be performed by a **qualified licensed electrician**.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.
- It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry. Should optical assembly become dirty on the inside, wipe refractor/lens and clean in above manner, replacing damaged gaskets as necessary.
- **DO NOT INSTALL DAMAGED PRODUCT!** This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- Recycle: For information on how to recycle LED electronic products, please visit www.epa.gov.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be referred to Acuity Brands Lighting, Inc.



WARNING
RISK OF ELECTRIC SHOCK

- ✓ Disconnect or turn off power before installation or servicing.
- ✓ Verify that supply voltage is correct by comparing it with the luminaire label information.
- ✓ Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.
- ✓ All wiring connections should be capped with UL approved recognized wire connectors.



WARNING
RISK OF BURN

- ✓ Allow lamp/fixture to cool before handling. Do not touch enclosure or light source.
- ✓ Do not exceed maximum wattage marked on luminaire label.
- ✓ Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.



CAUTION
RISK OF INJURY

- ✓ Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- ✓ Avoid direct eye exposure to the light source while it is on.



CAUTION
RISK OF FIRE

- ✓ Keep combustible and other materials that can burn, away from lamp/lens.
- ✓ Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.



CAUTION: RISK OF PRODUCT DAMAGE

- ✓ Never connect components under load.
- ✓ Do not mount or support these fixtures in a manner that can cut the outer jacket or damage wire insulation.
- ✓ Unless individual product specifications deem otherwise: Never connect an LED product directly to a dimmer packs, occupancy sensors, timing devices, or other related control devices. LED fixtures must be powered directly off a switched circuit.
- ✓ Unless individual product specifications deem otherwise: Do not restrict fixture ventilation. Allow for some volume of airspace around fixture. Avoid covering LED fixtures with insulation, foam, or other material that will prevent convection or conduction cooling.
- ✓ Unless individual product specifications deem otherwise: Do not exceed fixtures maximum ambient temperature.
- ✓ Only use fixture in its intended location.
- ✓ LED products are Polarity Sensitive. Ensure proper Polarity before installation.
- ✓ Electrostatic Discharge (ESD): ESD can damage LED fixtures. Personal grounding equipment must be worn during all installation or servicing of the unit.
- ✓ Do not touch individual electrical components as this can cause ESD, shorten lamp life, or alter performance.
- ✓ Some components inside the fixture may not be serviceable. In the unlikely event your unit may require service, stop using the unit immediately and contact an ABL representative for assistance.
- ✓ Always read the fixtures complete installation instructions prior to installation for any additional fixture specific warnings.

Please see product specific installation instructions for additional warnings or any applicable FCC or other regulatory statements.

Failure to follow any of these instructions could void product warranties. For a complete listing of product Terms and Conditions, please visit www.acuitybrands.com.

Our Brands	Indoor/Outdoor	Indoor Lighting	Outdoor Lighting	Controls	Daylighting
	Lithonia Lighting	Gotham	American Electric Lighting	DARK TO LIGHT	SunOptics
	Carandini	Mark Architectural Lighting	Antique Street Lamps	LC&D	
	Holophane	Peerless	Hydrel	ROAM	
	RELOC	Renaissance Lighting	Tersen	Sensor Switch	
	Light Concepts	Winona Lighting		Synergy	


Acuity Brands Lighting, Inc. assumes no responsibility for claims arising out of improper or careless installation or handling of its products.

ABL LED General Warnings, Form No. 503.203


© 2010 Acuity Brands Lighting, Inc. All rights reserved. 12/01/10

STL INSTALLATION INSTRUCTIONS

REMOVE FIXTURE FROM PACKAGING

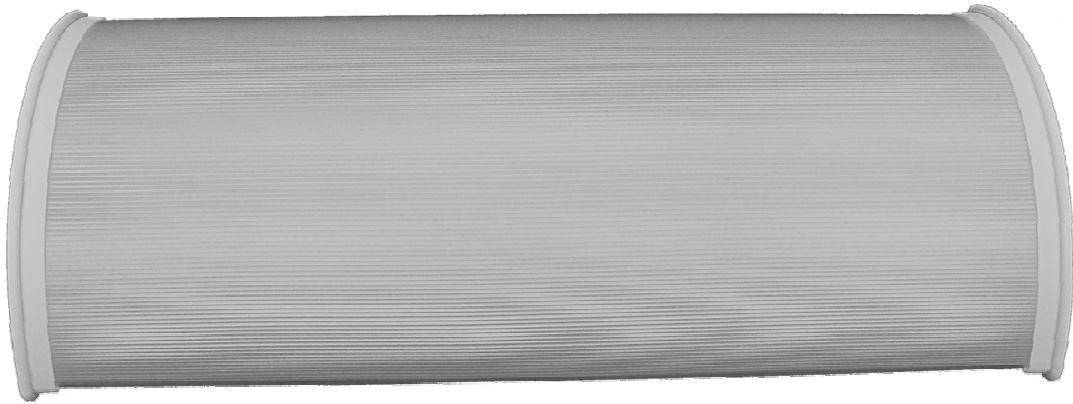

SLIDE LIGHT TRAP AWAY FROM ALUMINUM
END PLATE AT BOTH ENDS OF DIFFUSER

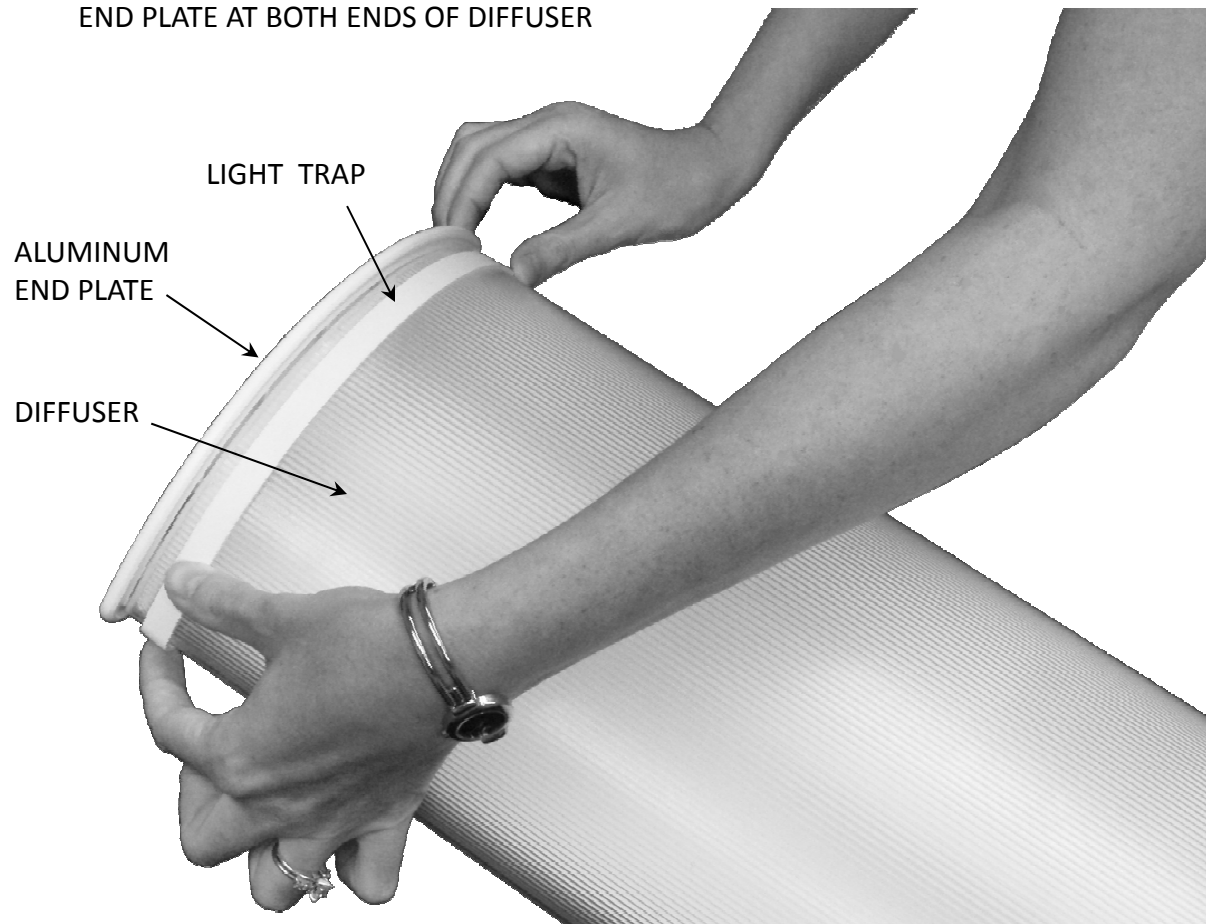

REMOVE DIFFUSER BY LIFTING FROM ONE SIDE OF FIXTURE
TO DISENGAGE FROM END PLATE PINS




LIFT DIFFUSER AND REMOVE FROM END
PLATE PINS ON OPPOSITE SIDE ON FIXTURE.




END PLATE PINS

CHANNEL COVER/LIGHT ENGINE

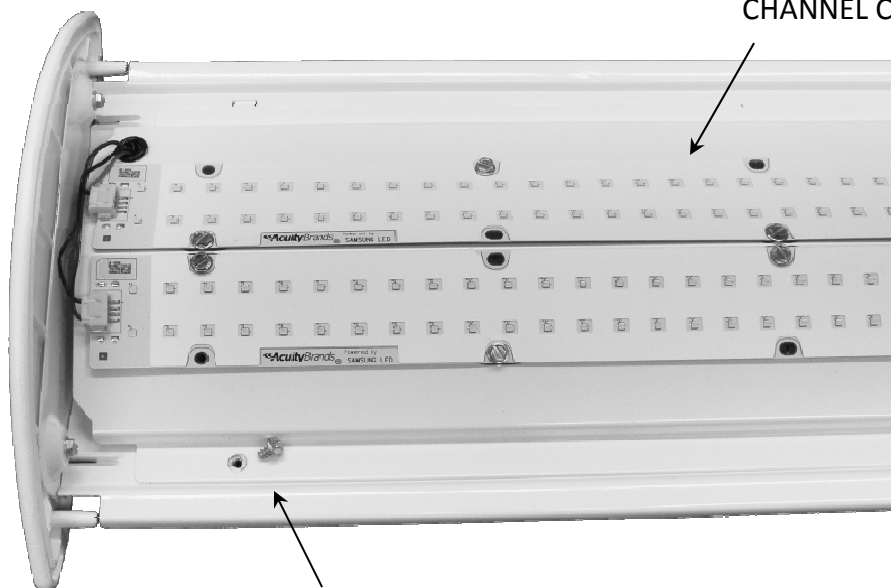

REMOVE SCREWS (2)
SECURING CHANNEL COVER


ROTATE CHANNEL COVER AS SHOWN AND SLIDE FROM
'T' SLOTS ON OPPOSITE SIDE OF HOUSING

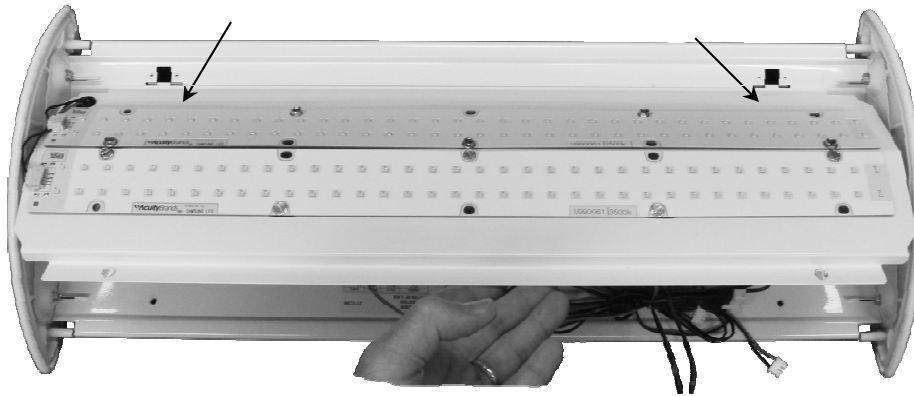

REMOVE CHANNEL COVER




INSTALL FIXTURE BY SECURING TO SURFACE WITH
MOUNTING SLOTS PROVIDED OR SUSPEND MOUNT
WITH FEATURES PROVIDED

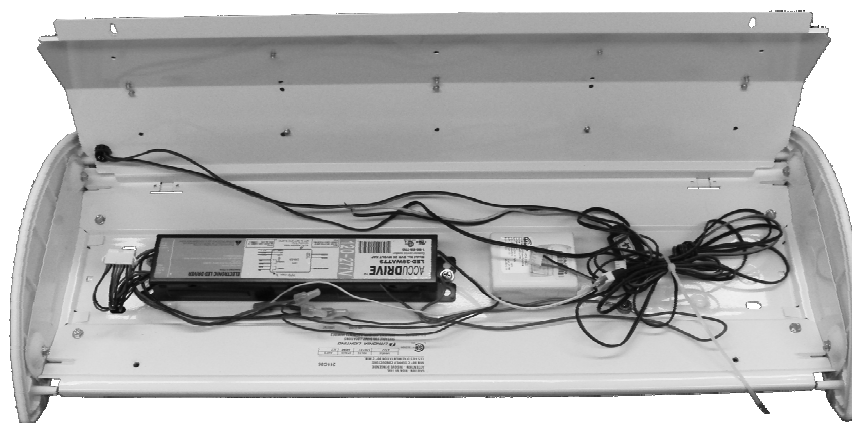

MAKE ELECTRICAL CONNECTIONS FROM
SUPPLY AND PROPERLY GROUND. REINSTALL
CHANNEL COVER INTO HOUSING 'T' SLOTS AND
CONNECT HARNESS FROM CHANNEL COVER TO
DRIVER PLUG. ROTATE CHANNEL COVER INTO POSITION
AND INSTALL SCREWS (2) SECURING CHANNEL COVER.

INSTALL DIFFUSER
HANG FROM END PLATE PINS ON ONE SIDE OF THE FIXTURE
AND ROTATE INTO POSITION. FLEX THE DIFFUSER TO ENGAGE
END PLATE PINS ON OPPOSITE SIDE OF FIXTURE

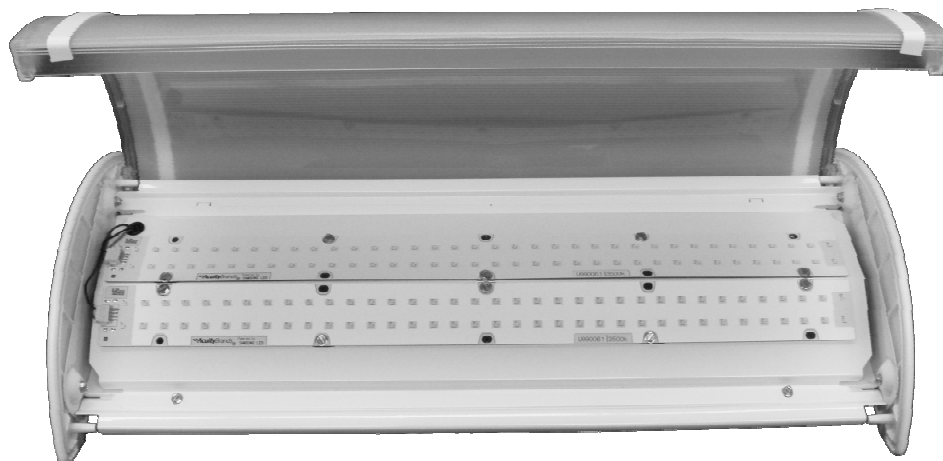


SLIDE LIGHT TRAPS BACK INTO POSITION
INTO THE RECESS PROVIDED IN END PLATE




ST DIFFUSER REMOVAL / INSTALLATION


SLIDE LIGHT TRAP AWAY FROM ALUMINUM
END PLATE AT BOTH ENDS OF DIFFUSER

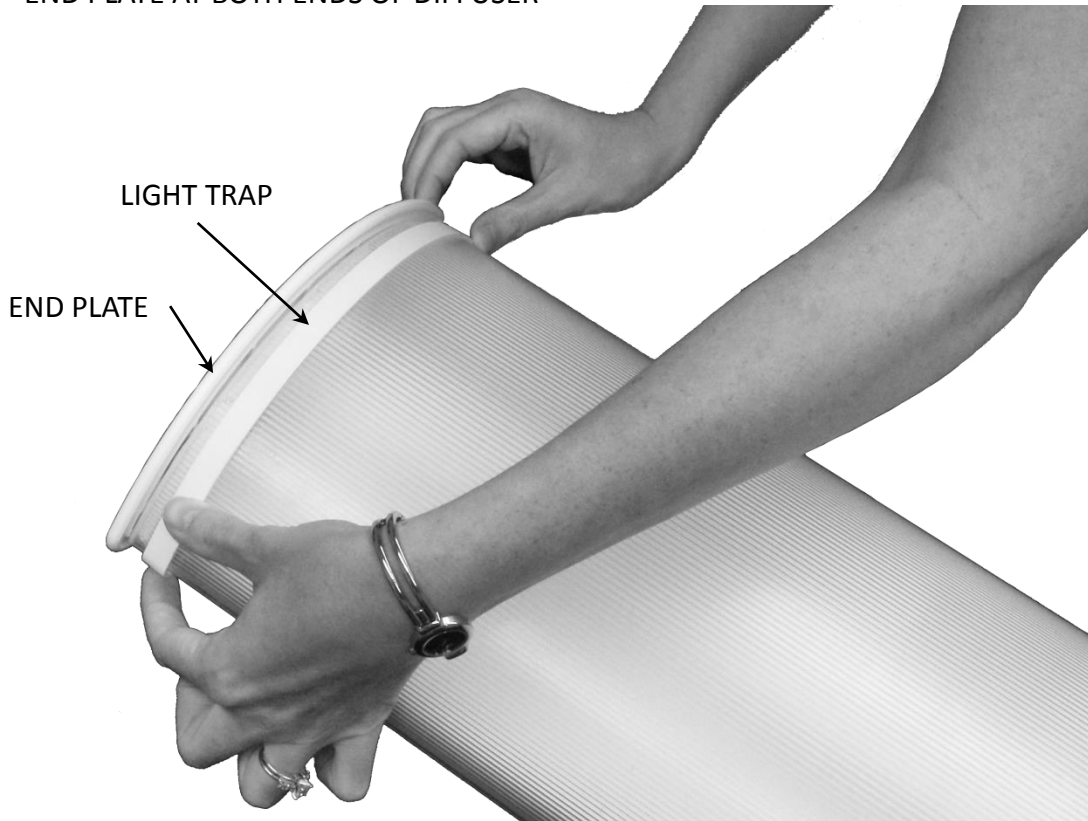


REMOVE DIFFUSER BY LIFTING FROM ONE SIDE OF FIXTURE
TO DISENGAGE FROM END PLATE PINS

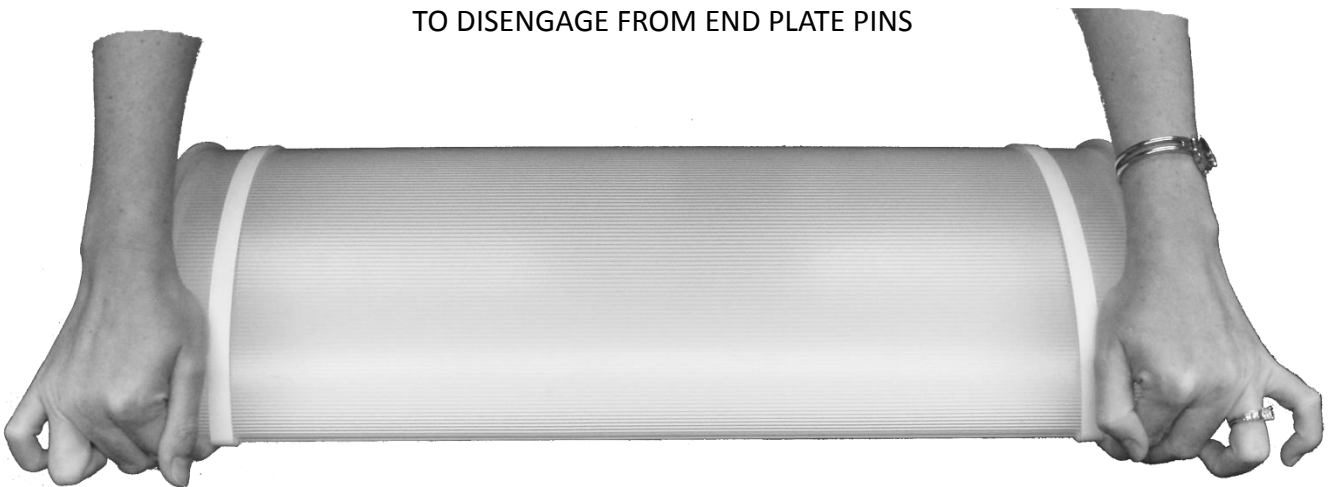

LIFT DIFFUSER AND REMOVE FROM END
PLATE PINS ON OPPOSITE SIDE ON FIXTURE.

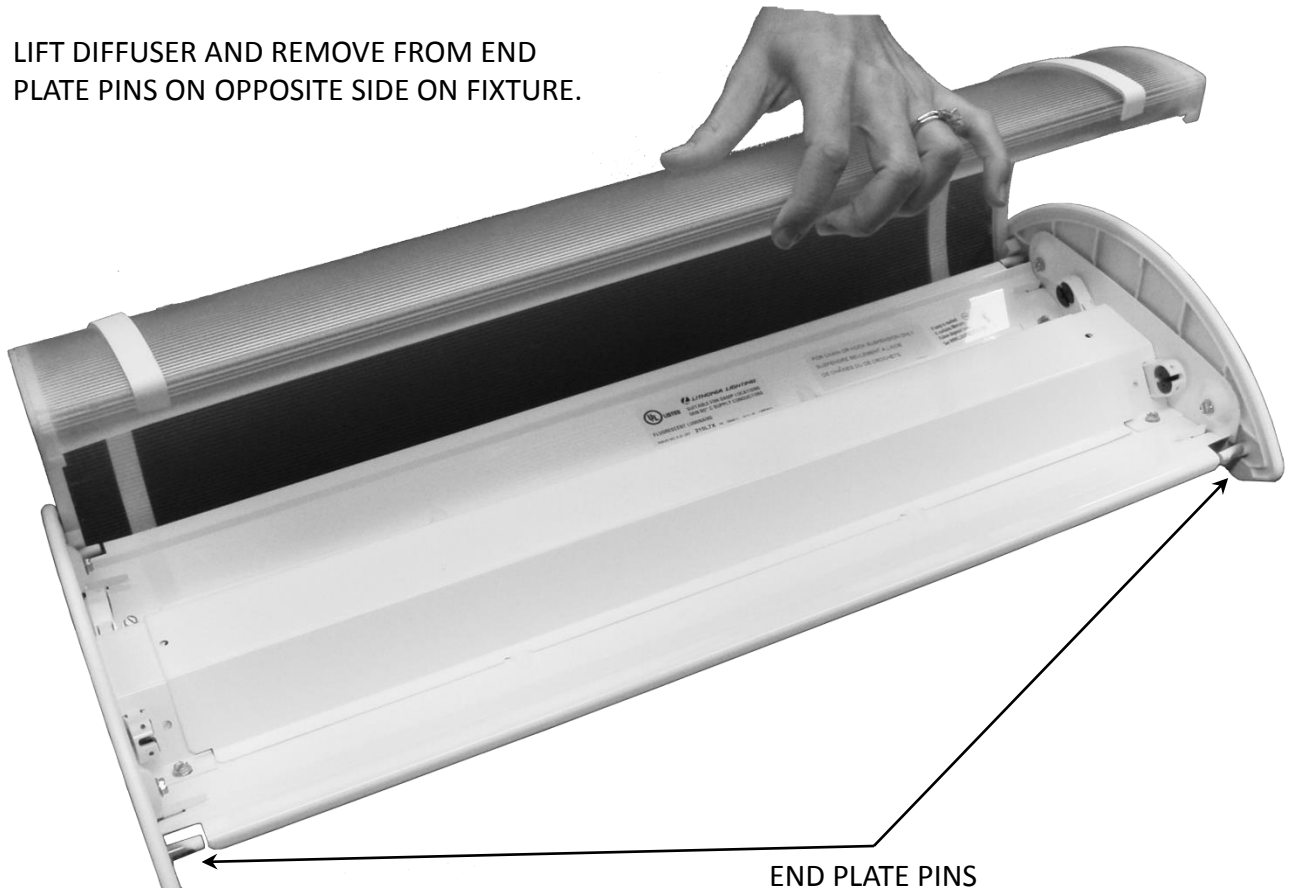


INSTALL DIFFUSER BY HANGING FROM END PLATE PINS ON ONE SIDE
OF THE FIXTURE AND ROTATE INTO POSITION. FLEX THE DIFFUSER TO
ENGAGE END PLATE PINS ON OPPOSITE SIDE OF FIXTURE

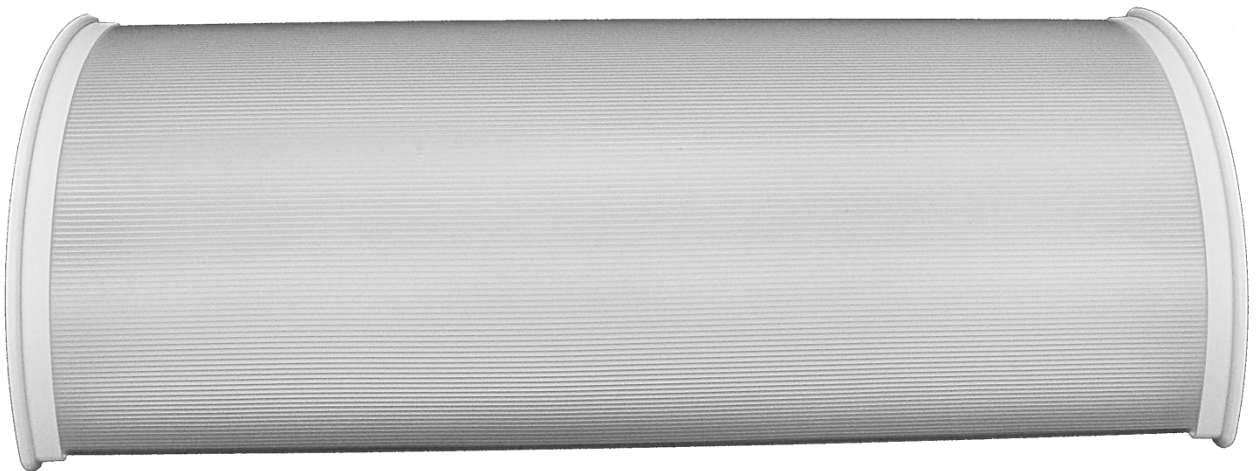


AFTER DIFFUSER IS SECURELY ATTACHED AT ALL CORNERS,
SLIDE LIGHT TRAPS INTO RECESS IN END PLATES

ST DIFFUSER REMOVAL / INSTALLATION


SLIDE LIGHT TRAP AWAY FROM ALUMINUM
END PLATE AT BOTH ENDS OF DIFFUSER

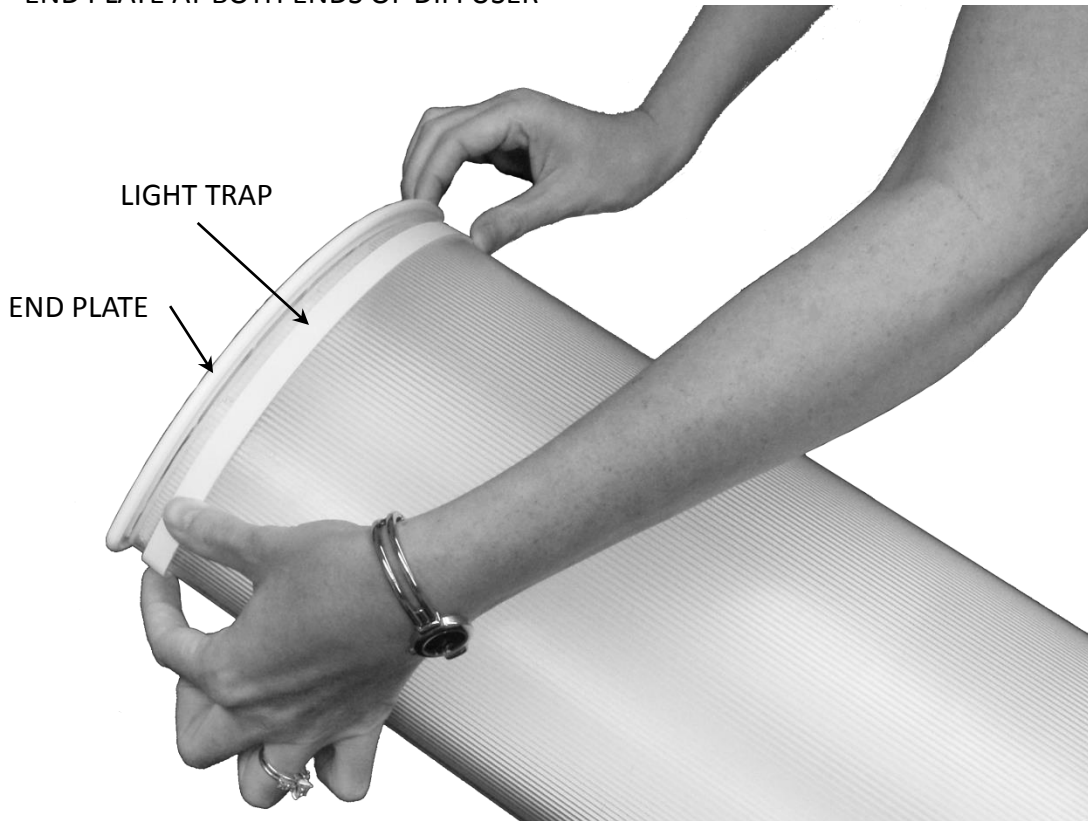


REMOVE DIFFUSER BY LIFTING FROM ONE SIDE OF FIXTURE
TO DISENGAGE FROM END PLATE PINS

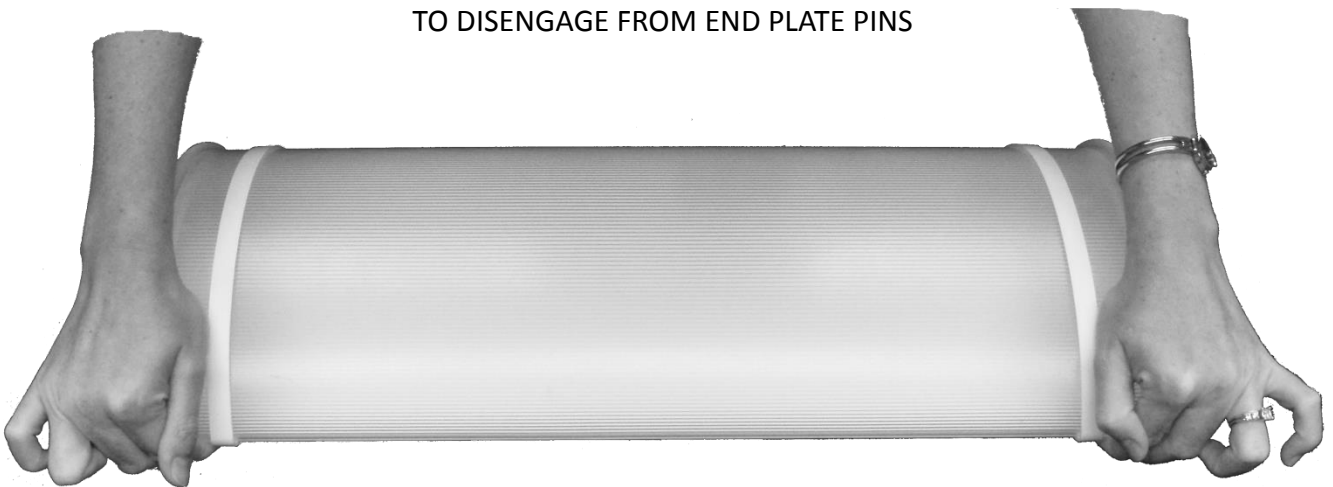

LIFT DIFFUSER AND REMOVE FROM END
PLATE PINS ON OPPOSITE SIDE ON FIXTURE.

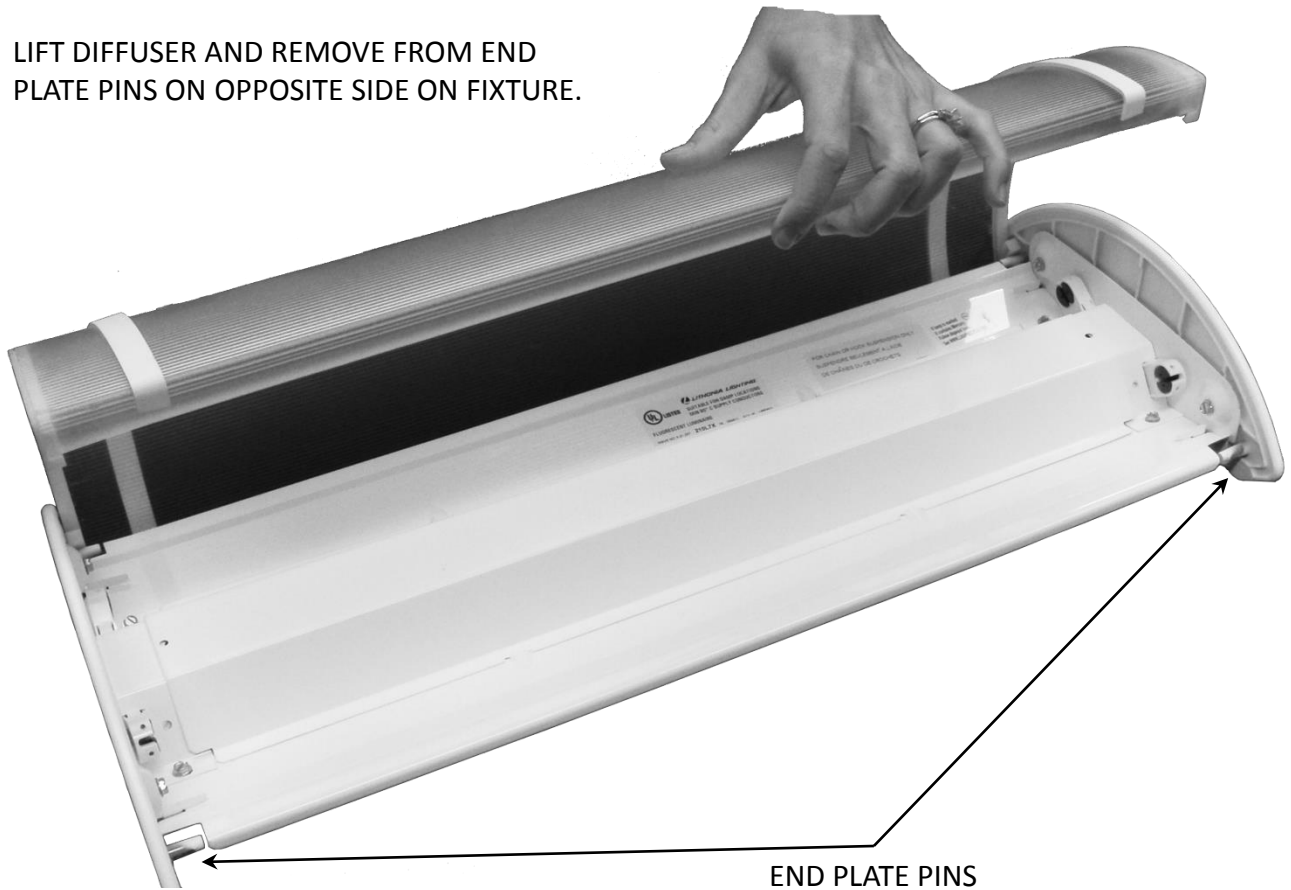

INSTALL DIFFUSER BY HANGING FROM END PLATE PINS ON ONE SIDE
OF THE FIXTURE AND ROTATE INTO POSITION. FLEX THE DIFFUSER TO
ENGAGE END PLATE PINS ON OPPOSITE SIDE OF FIXTURE

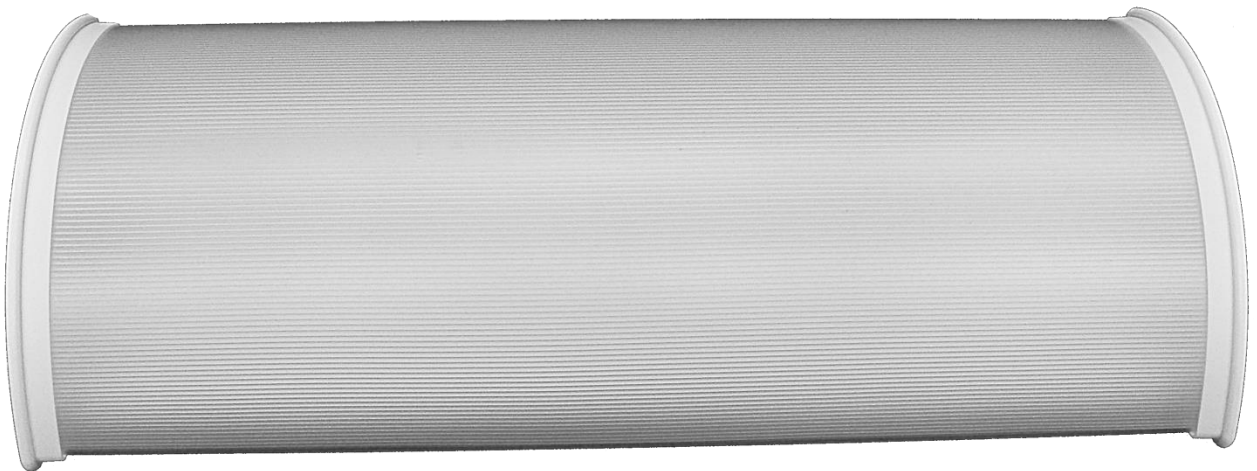

AFTER DIFFUSER IS SECURELY ATTACHED AT ALL CORNERS,
SLIDE LIGHT TRAPS INTO RECESS IN END PLATES