# INSTRUCTIONS X17™ XFU 3-WAY FIELD ADJUSTABLE FLOODLIGHT SELECTABLE PHOTOCELL INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com



X17 XFU 80/60/40W Knuckle



X17 XFU 80/60/40W Trunnion

#### IMPORTANT

#### READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside. WARNING: Do not use an electric generator to test LED fixtures. WARNING: Min 75°C SUPPLY CONDUCTORS.

## KNUCKLE MOUNT

To ensure weatherproof seal, apply weatherproof silicone sealant around the edge of the Junction Box (*not supplied*). This is especially important with an uneven wall surface.


- Secure the fixture to a 1/2" NPS hole in the junction box or landscape post as shown in Fig. 1. Seal arm thread using Teflon<sup>®</sup> tape or silicone sealant.
- 2. Make appropriate wire connections per NEC in an approved enclosure (*not included*) see **Fig. 9.**
- 3. The Knuckle Arm allows 180° of vertical aiming adjustment depending on the mounting position as shown in Fig. 2.

### TRUNNION MOUNT

#### Trunnion Mount accessory included.

To Install the Trunnion:

- Remove the pre-installed Knuckle Mount by loosening the Socket Head Screw and removing Bracket A as shown in Fig. 3.
- 2. Loosen 2 Socket Head Screws to remove Bracket B as shown in Fig. 4.
- 3. Insert Fixture wires through the Trunnion and align with Fixture screw holes. Secure the Trunnion to the Fixture by tightening 2 Socket Head Screws as shown in Fig. 5.

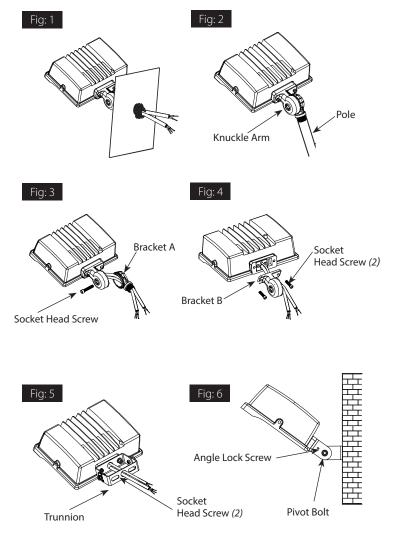

# INSTRUCTIONS X17™ XFU 3-WAY FIELD ADJUSTABLE FLOODLIGHT SELECTABLE PHOTOCELL INSTALLATION



RAB Lighting is committed to creating high-quality, affordable, well-designed and energy-efficient LED lighting and controls that make it easy for electricians to install and end users to save energy. We'd love to hear your comments. Please call the Marketing Department at 888-RAB-1000 or email: marketing@rablighting.com

### TRUNNION MOUNT CONT.

To adjust the angle of the fixture using the Trunnion (Fig. 6).


- 1. Loosen the Pivot Bolts and Angle Locking Screws.
- 2. Make appropriate wire connections per NEC in a approved enclosure (*not included*) see Fig 9.
- 3. Adjust Fixture to desired angle (Fig. 6).
- 4. Tighten Pivot Bolts and Angle Locking Screws.

## FIELD ADJUSTMENT


Follow instructions below to change fixture **Power** (W) or **Color Temperature** (CCT) from the factory settings and **Photocell** On/Off option.

#### Factory Settings: 4000K and 80W

- 1. Remove **Selector Switch Caps** by turning counterclockwise using a flat head screwdriver (*Fig. 7*).
- 2. Locate the Selector Switches on the fixture (Fig. 8).
- 3. Select **Power** (W) and **Color Temperature** (CCT) by sliding the respective switch to the desired value.
- 4. Select **Photocell** On/Off option by by sliding respective switch to the desired value.

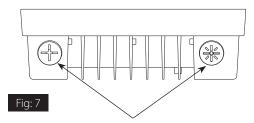


#### Selector Switch Caps

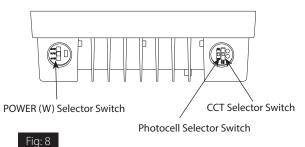

### 0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10 Dimming, follow the wiring directions as shown in **Fig. 9.** 

- 1. Connect the black/brown fixture lead to the LINE supply lead.
- 2. Connect the white/blue fixture lead to the COMMON supply lead.
- 3. Connect the green/yellow wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 4. Connect the purple fixture lead to the DIM V+ lead.
- 5. Connect the pink/gray fixture lead to the DIM V- lead.
- 6. Cap the yellow fixture lead, if present. Do NOT connect.

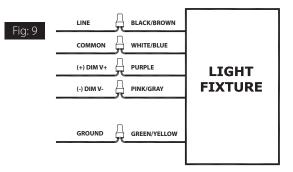

### CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean glass lens with non-abrasive glass cleaning solution.
- 2. Do not open the fixture to clean the LED. Do not touch the LED.

#### TROUBLESHOOTING

- 1. Is the fixture grounded properly?
- 2. It is recommended that gloves be worn to avoid injury during installation.
- 3. If any smoke or spark, please turn off the power immediately.

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.



Easy Answers

rablighting.com Visit our website for product info **Tech Help Line** Call our experts: 888 722-1000

e-mail Answered promptly - sales@rablighting.com

X17 XFU 80-60-40 IN-1221 73710-RAB