

To Install Rough-In Section

STEP 1 To Install Fixture


First determine location of placement of the slope adapter. Then, mount the light fixture so that the center line of the fixture is pointing at the center of the slope adapter location. The bottom of the plaster ring should be at a distance, D, from the center point on the finished ceiling surfaces. Follow fixture instructions for securing the fixture in place. **Caution:** It is recommended that the fixture is installed so that the J-box be located perpendicular to the slope in order to avoid interference with the sloped ceiling.

STEP 2 To Install Slope Adapter

The slope adapter should be installed before the trim. If the bottom of the plaster ring is not at the appropriate position, the adjustment can be made by loosening the two mounting bracket screws and sliding the fixture up or down. Retighten the screws when the proper position is obtained. The slope adapter is temporarily held in place by two coil springs which are hooked into the flange of the plaster ring and slipped through the holes in the slope adapter.

TO INSTALL TRIM

Trims are secured in place either by screws via keyhole slots or by coil springs. Follow the instructions included with the fixture to secure trim in place. The trim will hold the slope adapter in place.

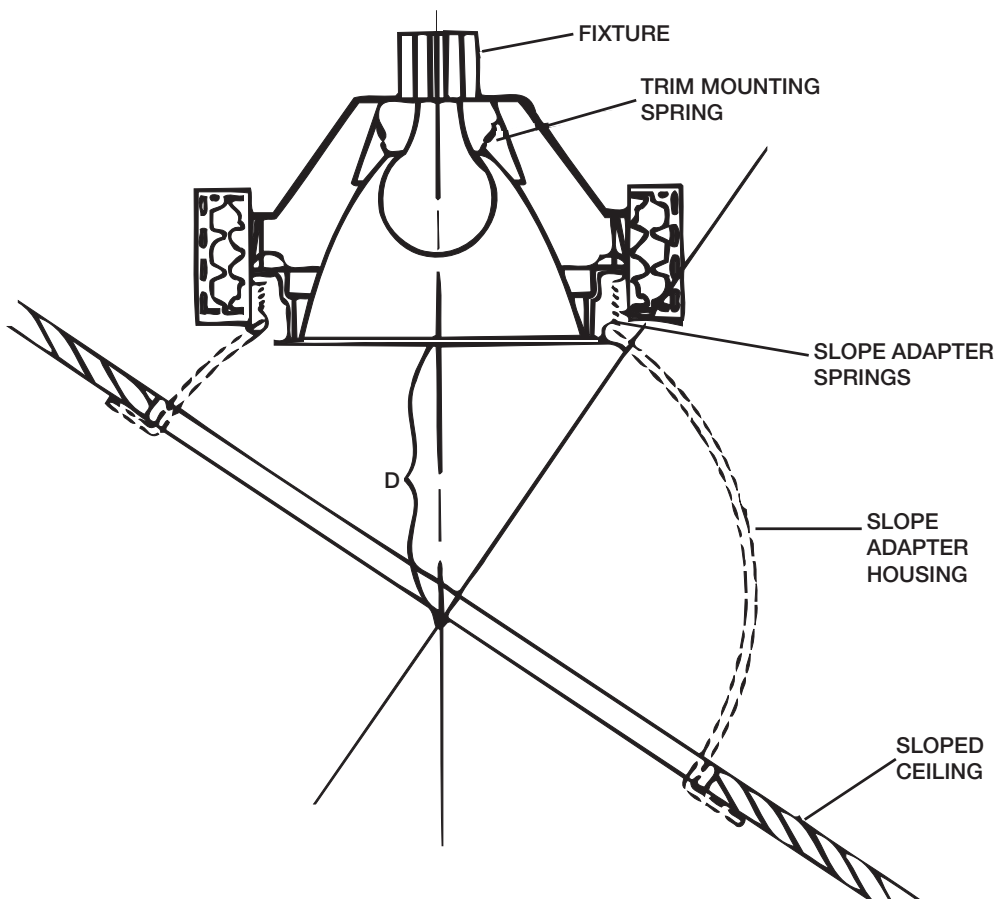

		D"
HSA	4-XX	4 1/16
HSA	6-XX	4 1/8
HSAC	6-XX	4 1/8
HSA	8-XX	4 7/8
HSA	10-XX	5 7/16
HSA	10-XX	9 3/16

ADP122020