


INSTALLATION INSTRUCTIONS For LED Decorative Pendants

Installation Instructions For Juno TLQJPLED78/TLQJPLED144 Pendant Cords

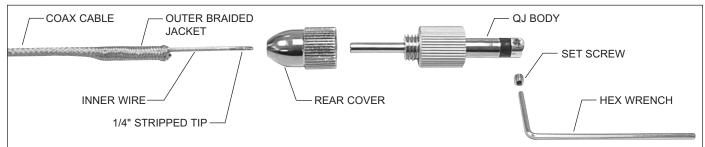

CAUTION: To reduce the risk of fire and electrical shock use these products only with the appropriate Juno trac system or monopoints having Quick Jack receptacles.

WARNING: Make sure power is off before assembly.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions completely before beginning installation. Keep these instructions in a safe place for future reference.
- To reduce the risk of fire and burns, do not install pendant cords where the exposed conductor can be shorted or contact any conductive material.
- Do not install any shade closer than 6 inches (15.25 cm) from any curtain or similar combustible materials.
- To reduce the risk of fire and overheating make sure all connections are tight.
- Turn off the electrical power before modifying the lighting system in any way.
- Qualified electricians, in accordance with local electrical codes should perform all installations.


SAVE THESE INSTRUCTIONS

CAUTION


ELECTROSTATIC DISCHARGE SENSITIVE

This product uses components that can be damaged by electrostatic discharge (ESD). Do not remove diffuser ball or touch without proper grounding.


1 Remove Quick Jack connector from coax cable by unthreading rear cover from QJ body, sliding rear cover down cable, loosening set screw, and pulling cord from connector. Remove rear cover from coax cable.

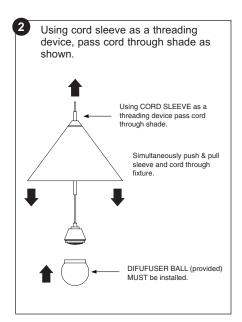


3 Determine desired cord length by holding cord alongside **threaded nipple** on monopoint and mark cord at the bottom edge of the **threaded nipple**. Add one inch, mark again and then cut with sharp wire cutters.

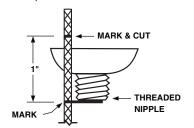







Verify the **set screw** in the tip of the **QJ body** is loosened enough for the inner wire to pass through the hole in the tip.




ETL CLASSIFIED CONFORMS TO UL STD 1598 AND CSA STD. C22.2 NO.250



1300 South Wolf Road • Des Plaines, IL 60018 • Phone 800-323-5068 • www.junolightinggroup.com



INSTALLATION INSTRUCTIONS For LED Decorative Pendants



Insert the inner wire until it passes through the QJ body and position the stripped portion of the inner wire so it is beneath the set screw, flush to the tip of the **QJ body**. Tighten the **set** screw with the hex wrench supplied. (Tip: if you have extra wire sticking out, later you can tap the end on a hard surface and make the wire flush.)



Slide the **outer braided jacket** over the back of the QJ body until it is flush with the threaded portion of the $\mathbf{Q}\mathbf{J}$ body. (Tip: do not allow the outer braided jacket to overlap the threads, it will make it difficult to attach the rear cover.)

