
RWLED™ ROADWAY INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

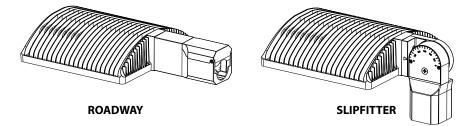

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

ROADWAY ARM MOUNTING

- 1. The **Roadway Arm** fits a 1", 1.25", 1.5" and 2" pole tenon.
- Slide the Fixture on the pole tenon. Unlatch the Arm
 Door and place the appropriate Pole Mounting Clamp
 in the Arm. The tenon diameter is marked on the pole
 mounting clamp.
- 3. Secure the fixture on the pole by tightening the pole mounting clamp with the hardware provided.
- Open the Arm Cover Plate to the Splice Box. Feed wires from Pole and fixture into the splice box. Make the necessary connections in the splice box and knot wires for strain relief.
- 5. Install the arm cover plate. Be sure the gasket and o-ring are in place. Tighten **Screws**, install the **Cap** and close the arm door.

WEDGE MOUNTING

- 1. To tilt the fixture use the **Wedge** with hardware provided.
- Open the Arm Cover Plate to the Splice Box. Unscrew the Bolts attaching the arm to the fixture.
- Insert the wedge between the fixture and Arm. Be sure to place Gasket between fixture and wedge and also between wedge and arm. Replace the bolts to 3/8-16 Bolts provided with the wedge. Tighten with the bolts.
- 4. Placing the wedge as shown the Fig, tilts the fixture by 5 degrees Upwards. To tilt the the fixture in opposite direction, rotate the Wedge by 180 degrees.

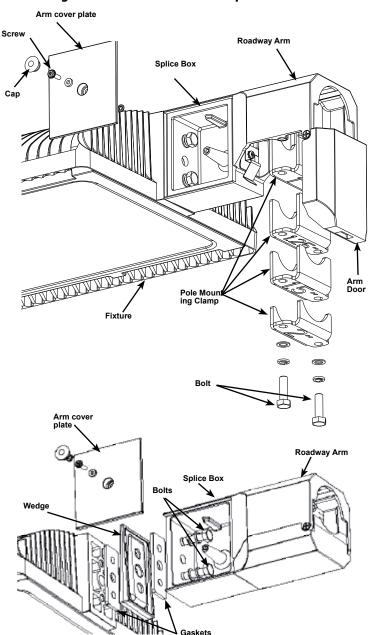

RWLED[™] ROADWAY INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com


SLIPFITTER MOUNTING


- 1. The **Slipfitter** fits a 2 ³/8" O.D. **Pole Tenon**. Place the slipfitter over the tenon and secure the fixture with 2 **Set Screws** on the side of the slipfitter.
- 2. Feed wires from **Fixture** through slipfitter and supply wires from **Pole**. Make the necessary connections in the slipfitter and knot wires for strain relief.
- To adjust the angle of the slipfitter, remove 2 screws and remove the Slipfitter Cover Plate. Loosen the Locking Bolt and swivel fixture to desired angle. The graduation on the slipfitter cover plate can be used as guidelines to adjust the angle.
- 4. Tighten the **Locking Bolt.** Replace slipfitter cover plate. Tighten **Screws.**
- 5. Seal Plug using Teflon tape or silicone sealant.

FIXTURE WIRING

Universal voltage driver permits operation at 120 to 277VAC, 50 or 60Hz. 6kV surge protector for 120 to 277VAC, 50 or 60Hz provided with the fixture. Wire the surge protector in the pole handle away from the fixture and at least 6" above ground.

- 1. Connect the black fixture lead to the (+) LINE supply lead and black surge protector wire.
- 2. Connect the white fixture lead to the (-) COMMON supply lead and white surge protector wire.
- 3. Connect the bare copper Ground wire from fixture to supply ground and green surge protector wire.

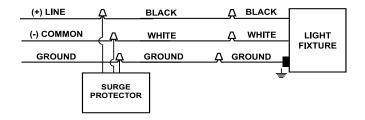

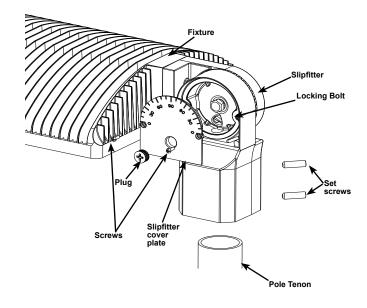

ACCESSORIES

Wedge can be ordered with

WEDGERW-A Bronze Wedge WEDGERW-W White Wedge WEDGERW-RG Roadway Gray Wedge

Fixtures with Roadway arm can be provided with 120V twist lock photocell (/PCT) 277V twist lock photocell (/PCT2)

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- 1. Clean glass lens with non-abrasive glass cleaning solution.
- 2. Do not open fixture to clean the LED. Do not touch the LED.

TROUBLESHOOTING

- Check that the line voltage at fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?
- 3. Is the photocell functioning properly (if used)?

RWLED[™] ROADWAY INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com



Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.

RAB fixture designs are protected under U.S. and International Intellectual Property laws.

Patents: **US:** pat. D587,839; **CN**: ZL200830272893.0; **MX:** 28396, **TW**: pat. 96304793-U02; CA: RAB Lighting, Inc

