

# Designed with an emphasis on safety

# 3256 MEAN Value

# 3257 True RMS

## 2 types of DMMs

for measuring differences in distorted waveforms

Measures RMS values of commercial mains power frequencies

Makes RMS measurements that exclude harmonic components.





■ Accurately measures harmonic wave components



Accurate measurements are guaranteed for components in the range from 50 to 500 Hz.

●Crest factor: 3.0 max. (Except 420mV range)

### Behind-the-scene safety features

The 3256 and 3257 models bear the CE mark meaning that they conform to standards such as the IEC61010-1 international safety standard and other EMC-related standards. Moreover, these units are designed with an emphasis on safety. In addition to a shutter mechanism that prevents incorrect test lead connection, the current terminals of the units come equipped with standard fast blow fuses.



CAT **II** 1000 V


Overload protection up to 600 V (1000 V for voltage and resistance ranges)

Voltage and resistance ranges: overload protection of up to 1000 V DC, 1000 V AC rms(sin) or 10<sup>7</sup> V•Hz

Current range: fuse protection

0.5 A / 700 VAC 50 kA interrupting capacity 10 A / 600 VAC 10 kA interrupting capacity



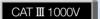

### Overload protection up to 1000 V



Voltage and resistance ranges: overload protection of up to 1000 V DC, 1000 V AC rms(sin) or 10<sup>7</sup> V•Hz

Current range: fuse protection


0.44 A / 1000 V 10 kA interrupting capacity 11 A / 1000 V 10 kA interrupting capacity

Overvoltage category (CAT)

In order to promote the safe use of measuring instruments, safety level standards are classified under IEC60664 into overvoltage categories CAT I through IV, depending on the location where the instrument is to be used. Categories with a higher number indicate an electrical environment that has high levels of instantaneous energy. Therefore, a measuring instrument designed for CAT III can endure higher instantaneous energy than an instrument designed for CAT II.

CAT II: Primary electrical circuits in equipment connected to a wall outlet via a power cord.


CAT III: Circuits between primary and distribution panels and outlets in equipment that reads electricity from the direct distribution panel via electrical reads (fixed equipment).

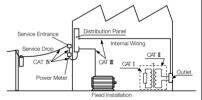

### 3256 Only



#### Check for live lines safely and easily

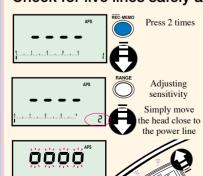

Buzzer sounds and flashing

In the AC V range, the 3256 can be used to check whether power lines are live. When the sensitivity level is set to 4 and the test head is placed near a live power line, the built-in buzzer sounds and a display indicator lights.

Sensitivity threshold: 100 V AC or higher

### **3257** Only



#### Analyze pulse control signals



The ratio between pulse width (TW+ or TW-) and pulse recursion cycle (T) is displayed as a percentage.

Display range: 5 to 95% Accuracy:

10 Hz to 1 kHz; ±1.0% rdg.±15 dgt. 1 kHz to 10 kHz; ±1.0% rdg.±50 dgt.

Accuracy rating pertains to a square wave of 5Vp-p.



### **Practical functions**

I want to see fluctuations with respect to the current value... I want to zero adjust the resistance range...

#### Relative function

This setting can be used with the V, A and  $\Omega$  functions

Any value can be set as the reference value and values can be displayed relative to the reference value.



I want to keep track of values measured...

#### Memory function (REC.MEMO)

This setting can be used with the V, A,  $\Omega$  and Hz functions. Up to 20 data points can be held using this function.

Up to 20 display values obtained with Hold or Automatic Hold can be stored sequentially. Several types of data can be held at once.



I can't see the reading because it is too dark... I can't check the reading right now...

### Automatic Hold function (H.AUTO)

This setting can be used with the V, A and  $\Omega$  functions.

This function is useful when the device being tested needs to be monitored constantly.

This function can be set to hold the display when



I want to read the max/min/average values...

#### Recording function



Press for at least 1 second

This setting can be used with the V, A and  $\Omega$  functions.

The display can be switched between the present measurement value and the maximum, minimum, or average values measured since the start of recording. This is useful when observing changes over an extended period of time.



Care must be taken with regard to battery life

I cannot use the unit because the batteries are dead...

#### Automatic power saver function


Because the LCD goes out when the unit is idle for 10 minutes, unnecessary power consumption is easily avoided. This function can also be disabled.



This function is automatically disabled when recording.



Actual-size

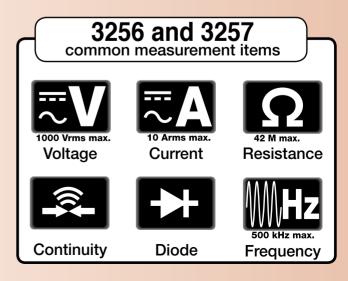

### ■ 3256 & 3257 common specifications

	Range	Accuracy		Notes		Overload
		DC	AC	Notes		protection
AC / DC voltage V	420.0 mV	0.5%rdg. 2dgt.	1.5%rdg. 3dgt. 50Hz to 100Hz	Input impedance	Greater than 100M Appox. 11 M	DC 1000 V 1000 Vrms(sin) or 10 <sup>7</sup> V Hz 1 minute
	4.200 V					
	42.00 V		1.2%rdg. 3dgt. 50Hz to 500Hz		Аррох. 10 М	
	420.0 V					
	1000 V		1.2%rdg. 6dgt. 50Hz to 500Hz			
AC / DC current A	42.00 A	1.5%rdg. 4dgt.	2.5 /01ag. 5ag.	Input impedance	Appox. 10 k	<b>3256</b> 40A to 420mA range:
	420.0 A				ADDOX. 100	0.5A/700V fuse
	4200 A					10A range: 10A/600V fuse <b>3257</b> 40A to 420mA range: 0.44A/1000V fuse 10A range: 11A/1000V fuse
	42.00 mA				Appox. 1	
	420.0 mA				Appox. 1	
	10.00 A				Аррох.0.01	
Resistance	420.0	0.7%rdg. 4dgt.			3.4 Vmax.	
	4.200 k		lg. 2dgt.	Open-circuit terminal voltage	Appox.0.7 V	DC 1000 V
	42.00 k	0.7%rd			Appox.0.5 V	
	420.0 k					
	4.200 M	1.5%rdg. 2dgt.				DC 1000 V 1000 Vrms(sin) or
	42.00 M		2.5%rdg. 2dgt.			
Continuity	420.0	0.7%rdg. 4dgt.  A built-in buzzer sounds when the resistance value is less than 50 30		Open-circuit terminal voltage 3.4 Vmax.		10 <sup>7</sup> V Hz 1 minute
Diode <del>▶</del> I	2.00 V	5.0%rdg. 2dgt.		Open terminal voltage/current 3.4 Vmax. Appox.500 A		
Frequency Hz	0.50Hz to 199.99Hz	0.02%rdg. 2dgt.		ATT. range 4.2/ 42/ 420/ 1000 V		
	200.0Hz to 500.0kHz	0.02%rdg. 1dgt.				

AC measurement Accuracy: In the 3256, 2 dgt. is added for inputs less than 10% of the full scale Accuracy is not rated for inputs less than 1.0 mV in the 420 mV range.

For the 3257, the accuracy rating is for inputs greater than 10% of full scale.

Measurement times in the 10 A range: continuous up to 7 A, maximum 1 minute for 7 A to 10 A.

●Display: data display; 4200 max. (19999 for frequency range), 42-dot bar graph •Sampling rate: 2.5 samples/sec (for other measurements than in Hz), 5 samples/sec (5 Hz or more), approx. 25 samples/sec (bar graph) ● Range selection: automatic and manual Ambient temperature / humidity: 0 to 50°C (32°F to 122°F) 80% rh (no condensation) Storage temperature/ humidity range: -20 to 60°C (-4°F to 140°F) 70% rh (no condensation) 

Power source: R03 manganese battery×2 or LR03 alkaline battery×2 ● Continuous operation: In DC voltage approx. 100 hours (with manganese batteries), approx. 200 hours or more (with alkaline batteries) 

Dimensions and Mass: Approx. 76 W X167 H X 33 D mm, approx. 260g (Approx 3.0" W × 6.6" H X1.3" D, 9.2 oz.) (including batteries)

With Semi-hard Carrying Case

3256-50 (MEAN value type) 3257-50 (True RMS type)

(Includes TEST LEADS 9207-10 and CARRYING CASE 9378)


With Holster

3256-51 (MEAN value type) 3257-51 (True RMS type)

(Includes TEST LEADS 9207-10 and holster)



TEST LEAD 9207-10 (included) cord length 70cm

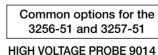

(No CE marking)



HIOKI E.E. CORPORATION

#### HEAD OFFICE:

81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 / FAX +81-268-28-0568 E-mail: os-com@hioki.co.jp

#### **HIOKI USA CORPORATION:**

6 Corporate Drive, Cranbury, NJ 08512 USA TEL +1-609-409-9109 / FAX +1-609-409-9108 F-mail: hioki@hiokiusa.com

HIOKI (Shanghai) Sales & Trading Co., Ltd.: 1904 Shanghai Times Square Office, 93 Huai Hai Zhong Road Shanghai, P.R.China POSTCODE: 200021 TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360 E-mail: info-sh@hioki.cn

Beijing Office: A-2602 Freetown, 58 Dong San Huan Nan Road Beijing, P.R.China POSTCODE: 100022 TEL +86-10-5867-4080/4081 FAX +86-10-5867-4090 E-mail: info-bi@hioki.cn Guangzhou Office : Room 303, Profit Plaza, No.76, West Huangpu Road

Guangzhou, P.R.China POSTCODE: 510623 TEL +86-20-38392673/2676 FAX +86-20-38392679 E-mail: info-gz@hioki.cn

DISTRIBUTED BY