



Recessed and Trac Lighting

INSTALLATION INSTRUCTIONS

Juno Pendants with Juno® Trac-Master Adapters

IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions prior to installing this product.
2. Turn off electrical power and allow luminaire & lamp to cool before servicing and/or replacing lamp.
3. Connect this product only to a 120V 60hz Juno® Track-Master Track.
4. Install this product only in dry or damp locations. Do not install in wet locations.

Note: This product is intended to be installed in accordance with national and/or local electrical codes. Check with a qualified electrician prior to installing.

WARNING


TURN OFF POWER TO THE JUNCTION BOX BEFORE INSTALLATION.

SAVE THESE INSTRUCTIONS

IMPORTANT NOTE: It is best to apply pressure to the latch during all assembly steps to prevent the latch from becoming dislodged from the adapter housing. Note the position of the latch components in case re-assembly is required. Use constant thumb pressure or apply a piece of low stick tape to keep the latch in place during assembly.

INSTALLATION

- ① Remove adapter assembly screws and save for re-assembly.
- ② Remove contact tower from adapter housing.
- ③ Unscrew and save finial.
- ④ Remove strain relief from inside adapter housing.
- ⑤ Route pendant cord through the finial, adapter housing and strain relief as shown. Position strain relief on cord at desired location and securely tighten set screw to hold in place.
- ⑥ Connect pendant cord wires to adapter leads using (3) wire nuts provided. Black to black, white to white, green to green.
- ⑦ Apply tension to pendant cord so that strain relief seats in pocket at the bottom of the adapter housing. Maintain tension on the cord and tighten finial back onto the strain relief threads.
- ⑧ Check latch position and function. Latch spring must be seated and functioning properly.
- ⑨ Re-position contact tower into adapter housing. Make sure wires are not trapped or pinched. Secure contact tower to adapter housing using the (2) assembly screws provided.

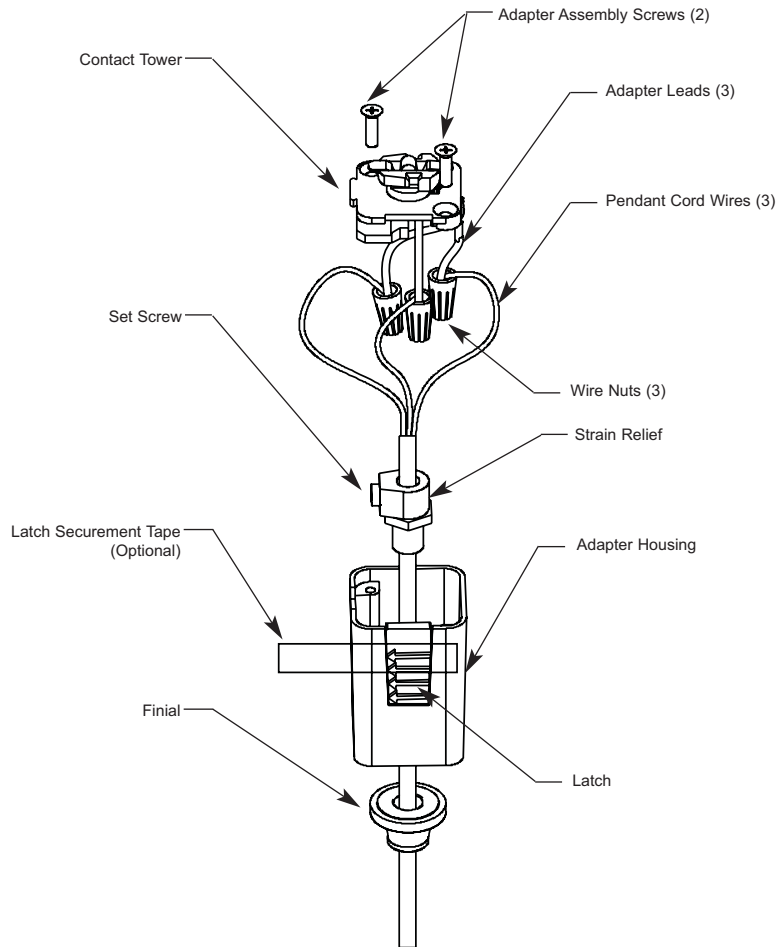

WARRANTY

Juno Lighting Group warrants that its products are free from defects in material and workmanship for one year from date of purchase, two years from date of purchase for Energy Star® rated fixtures. Juno Lighting Group's obligation is expressly limited to repair or replacement, without charge, at Juno Lighting Group's factory after prior written return authorization has been granted. This warranty shall not apply to products which have been altered or repaired outside of Juno Lighting Group's factory. This warranty is in lieu of all other warranties, expressed or implied, and without limiting the generality of the foregoing phrase, excludes any implied warranty of merchantability. Also, there are no warranties which extend beyond the description of the product on the company's literature setting forth terms of sale.

1300 South Wolf Road • Des Plaines, IL 60018
PHONE (847) 827-9880 • FAX (847) 827-2925 • www.junolightinggroup.com



JUNO LIGHTING GROUP
by Schneider Electric