



INSTALLATION INSTRUCTIONS

Upon receipt of fixture and accessories (packed separately) thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the packing slip with the fixture label on the inside of the unit to be sure you have received the correct merchandise.


GATEWAY™

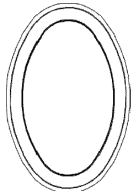

VG01C Series

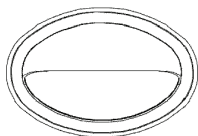

VG02C Series

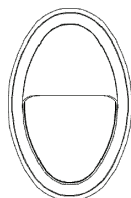

VG03C Series

IMPORTANT SAFETY INSTRUCTIONS

(For Your Protection, Read Carefully)


- This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- Proper grounding is required to ensure personal safety.
- Use approved connectors for all electrical connections.
- **ALL** work should be done by a qualified electrician.
- **WARNING: NEVER** disconnect any component while power supply is engaged. Be sure all potential power sources are disconnected.

Prior to Installation

Read carefully before installing light fixtures. If you do not understand these instructions, please contact your local Lithonia distributor before installing.

INSTALLATION: Gateway VGO 1/2/3 C Series

1. Remove hex head shipping screws (2) to free bezel/lens assembly from housing (Discard screws).
2. Remove component cover by removing (2) screws.
3. **For maximum vandal resistance**, use (4) mounting holes provided. Use 9/32" drill to clear mounting holes. May be mounted over outlet box or used with surface conduit wire entry. **Note:** 150°C wire must be used at 150° surface conduit entry port as labeled. When mounting in wet locations, remove backing from pad gasket provided and place on back square portion of housing. Place (4) small circular gaskets on mounting bosses.
4. Replace component cover and install appropriate lamp.
5. Install set screws (2 from bag assembly) into bezel with T-10 torx-head screwdriver.
6. Insert tab on bezel into slot on housing. **Caution:** For ceiling mount, support bezel/lens assembly when installing/removing. Apply forward pressure to bezel and turn set screws until they enter retaining inserts in casting. Finish tightening set screws until they are flush with bezel. **Note:** Do not over tighten or set screws may strip.

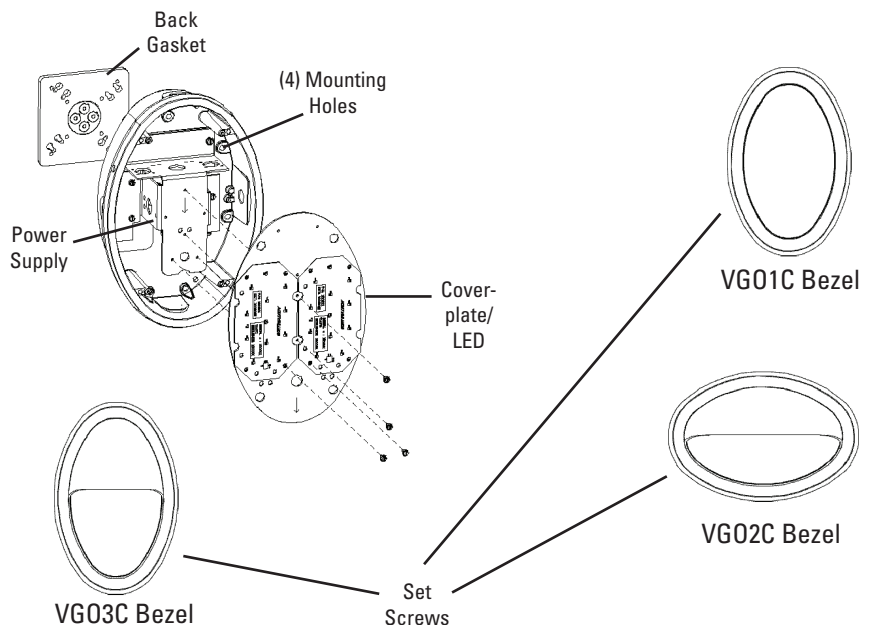

GROUNDING NOTE These fixtures must be grounded in accordance with NEC and applicable local codes and ordinances.

WARNING Recheck to be sure the proper fixture voltage lead has been selected to match the supply voltage. Improper wiring may result in ballast failure and voids all warranties.

NOTE: To maintain optimum performance, periodically clean optical.

WARNING: NEVER perform maintenance or cleaning while fixture is energized.

TROUBLESHOOTING

If this fixture fails to operate properly, check to make sure:

- The fixture is wired correctly.
- The fixture is grounded correctly
- The line voltage at the fixture is proper.

If all these variables have been checked and the fixture still does not operate properly, contact your local Lithonia Lighting distributor.