



Shown actual size: Pico wireless remote, 3-button with raise/lower in White (WH)

**Product family features**

- Wireless master control from any location
- **Requires compatible receiving device** (sold separately)
- Available in a variety of colors and button configurations with predetermined button labeling (4-button zone and scene remotes available with custom labeling)
- Nightlight models offer a continuously soft-glowing LED that allows the remote to be easily located in the dark
- Control a single light/shade, group of lights/shades, plug load, or audio system
- Can be wall-mounted, mounted on a tabletop pedestal, kept on a car visor clip, or used as a handheld control; adhesive-mount for standalone wall mounting included with Pico wireless remote; all other mounting accessories sold separately (see p. 192)
- Simple to install in single- or multi-gang applications with Claro or Pico wallplates
- Battery included; 10-year battery life (3-year battery life with nightlight model)
- Communicates via Lutron Clear Connect radio frequency (RF) technology to other wireless devices, including: Maestro Wireless (see pp. 22 and 136), GRAFIK T (see p. 94), PowPak plug-in (see p. 138), Caséta Wireless (see pp. 144 and 154), Vive Maestro Wireless (see p. 164), Vive PowPak (see pp. 174 and 178), Vive wireless receptacles (see p. 180), and Serena battery-powered shades (see p. 216)
- RF range of 60 ft (18 m) line-of-sight, 30 ft (9 m) through walls and floors to other compatible RF devices
- Operates at 434 MHz frequency

**Available finishes**

Use **BOLD** color code in model number (Example: PJ2-3BRL-G**WH**-L01)

**Gloss**

(available for most button configurations)



**WH**  
White



**WG**  
White/Gray



**IV**  
Ivory



**LA**  
Light Almond



**BL**  
Black

**White color palette in all models**



2-button



2-button  
with raise/lower



2-button  
with nightlight



3-button



3-button  
with raise/lower



3-button  
with raise/lower  
with nightlight



4-button

**Pedestal Gloss**



**WH**  
White




**BL**  
Black

**Mounting options**

**Single pedestal for tabletops**

(L-PED1-)

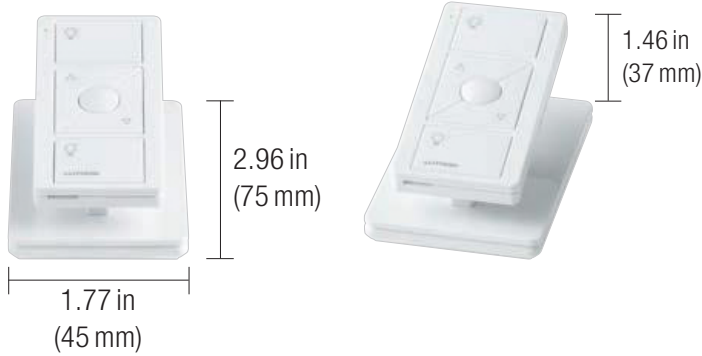

**Dual pedestal for tabletops**

(L-PED2-)




**Triple pedestal for tabletops**

(L-PED3-)



**Quad pedestal for tabletops**

(L-PED4-)

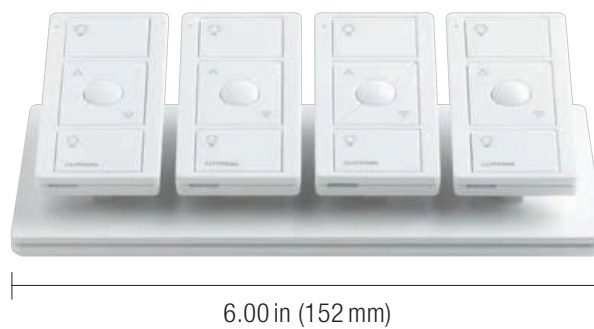


**Wall mount**

(no wallbox required)



Pico wireless remote mounted inside a 1-gang Claro wallplate in White (CW-1-WH), with wallbox adapter (PICO-WBX-ADAPT)

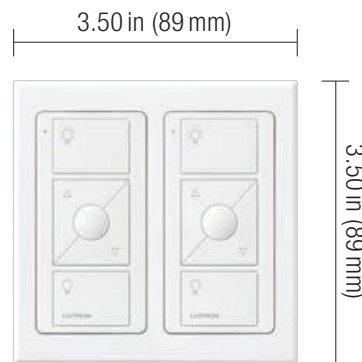

Pico wireless remotes mounted inside a Pico double wallplate in Arctic White (LPFP-S2-TAW)

**Car visor clip**


(PICO-CAR-CLIP)



## Labeling options with model number labeling codes

### Button Marking Codes:

#### 2-button

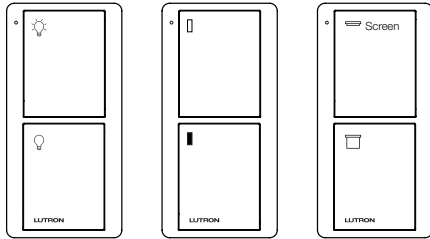


Light  
(L01)

Appliance  
(L02)

Screen  
(S08)


#### 2-button with raise/lower

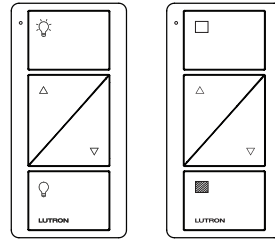

Light  
(L01)


Shade  
(S01)

#### 3-button

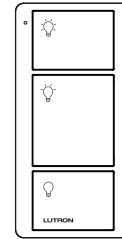

Light  
(L01)

#### 3-button with raise/lower

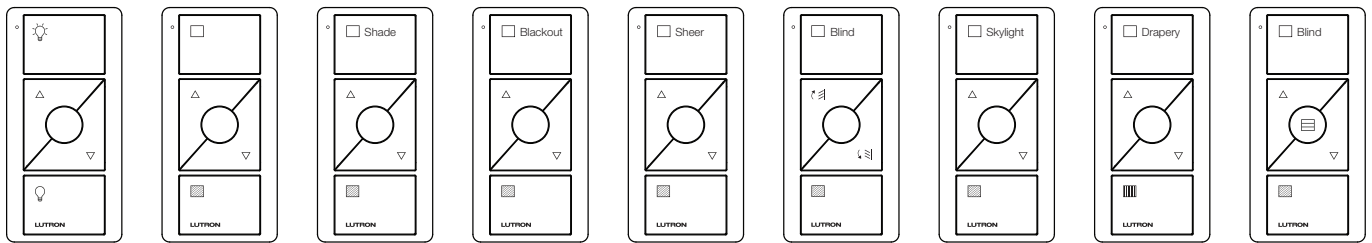

Light  
(L01)

Shade  
(icons)  
(S01)

Shade  
(text)  
(S02)

Blackout  
(S03)


Sheer  
(S04)

Blind  
(S05)

Skylight  
(S06)

Drapery  
(S07)


Horizontal  
Sheer Blind  
(S09)

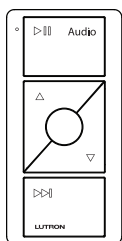

Audio  
(A02)


## Labeling options with model number labeling codes

### 4-button zone controls

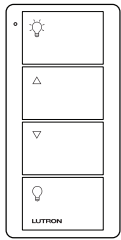

- < **ON button**  
Lights brighten to full intensity
- < **Raise button**  
Lights increase in intensity
- < **Lower button**  
Lights decrease in intensity
- < **OFF button**  
Lights dim to off


Lights  
(L01)

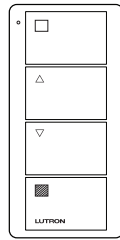

- < **OPEN button**  
Shades open fully
- < **Raise button**  
Shades open gradually
- < **Lower button**  
Shades close gradually
- < **CLOSE button**  
Shades close fully


Shades  
(S01)

### 4-button scene controls

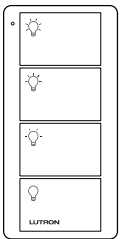

- < **3-scene buttons**  
Tap once: Sends device to preset levels. Press and hold for 8 seconds: Saves new preset level or position
- < **OFF button**  
Lights dim to off


Lights  
(L31)

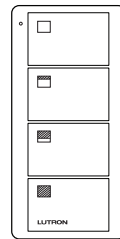

- < **OPEN button**  
Shades open fully
- < **2-scene buttons**  
Tap once: Sends device to preset levels. Press and hold for 6 seconds: Save new preset level or position
- < **CLOSE button**  
Shades close fully


Shades  
(S31)

### 4-button 2-group controls

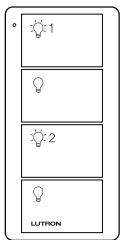


- < **ON button #1**  
Lights brighten to full intensity
- < **OFF button #1**  
Lights dim to off
- < **ON button #2**  
Lights brighten to full intensity
- < **OFF button #2**  
Lights dim to off

Lights  
(L21)

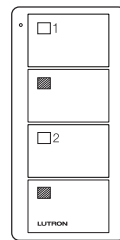

- < **OPEN button #1**  
Shades open fully
- < **CLOSE button #1**  
Shades close fully
- < **OPEN button #2**  
Shades open fully
- < **CLOSE button #2**  
Shades close fully

Shades  
(S21)

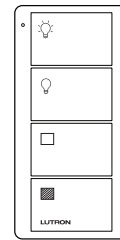

- < **ON button**  
Lights brighten to full intensity
- < **OFF button**  
Lights dim to off
- < **OPEN button**  
Shades open fully
- < **CLOSE button**  
Shades close fully

Lights/Shades  
(LS21)

### 2-button wireless remotes



- On/off (open/close)
- Light icon or screen text labeling
- Available with nightlight

### 2-button with raise/lower wireless remotes



- On/off (open/close) and raise/lower
- Light or shade icon labeling

#### Pico wireless remotes

##### 2-button

|                |                                      |
|----------------|--------------------------------------|
| Light icon     | PJ2-2B-G <b>XX</b> <sup>1</sup> -L01 |
| Appliance icon | PJ2-2B-G <b>XX</b> <sup>1</sup> -L02 |
| Screen text    | PJ2-2B-G <b>XX</b> <sup>1</sup> -S08 |

#### Pico wireless remotes

##### 2-button with raise/lower

|            |  |
|------------|--|
| Light icon | PJ2-2BRL-G <b>XX</b> <sup>1</sup> -L01 |
| Shade icon | PJ2-2BRL-G <b>XX</b> <sup>1</sup> -S01 |

#### Pico wireless remote with nightlight

##### 2-button

|            |                                      |
|------------|--------------------------------------|
| Light icon | PJN-2B-G <b>XX</b> <sup>1</sup> -L01 |
|------------|--------------------------------------|

**XX**<sup>1</sup>: Gloss color codes, see p. 185

### 3-button wireless remotes



- On/off and preset button
- Light icon labeling

#### Pico wireless remote

##### 3-button

|            |                                     |
|------------|-------------------------------------|
| Light icon | PJ2-3B- <b>XX</b> <sup>1</sup> -L01 |
|------------|-------------------------------------|

### 3-button with raise/lower wireless remotes



- On/off (open/close), raise/lower, and preset button
- Light or shade icon labeling
- Shade text labeling
- Available with nightlight

#### Pico wireless remotes

##### 3-button with raise/lower

|                             |  |
|-----------------------------|--|
| Light icon                  | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -L01 |
| Shade icon                  | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S01 |
| Shade text                  | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S02 |
| Blackout text               | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S03 |
| Sheer text                  | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S04 |
| Blind text                  | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S05 |
| Skylight text               | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S06 |
| Drapery text                | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S07 |
| Horizontal sheer blind text | PJ2-3BRL-G <b>XX</b> <sup>1</sup> -S09 |
| Audio text                  | PJ2-3BRL-G <b>XX</b> <sup>2</sup> -A02 |

#### Caséta Wireless Pico wireless remote

##### 3-button with raise/lower

|            |  |
|------------|--|
| Light icon | PJ2-3BRL- <b>XX</b> <sup>3</sup> -L01R |
|------------|--|

##### 3-button with raise/lower with wallplate and wallbox adapter

|            |                 |
|------------|-----------------|
| Light icon | PJ2-WALL-WH-L01 |
|------------|-----------------|

#### Pico wireless remote with nightlight

##### 3-button with raise/lower

|            |  |
|------------|--|
| Light icon | PJN-3BRL-G <b>XX</b> <sup>1</sup> -L01 |
|------------|--|

**XX**<sup>1</sup>: Available in Gloss colors, see p. 185  
**XX**<sup>2</sup>: Available in Gloss White (WH) and Black (BL)  
**XX**<sup>3</sup>: Available in Gloss White (WH) and Light Almond (LA)

### 4-button scene wireless remotes



- Light model offers 3 scenes and off
- Shade model offers 2 scenes and open/close
- Light or shade icon labeling
- Custom labeling available

### 4-button 2-group wireless remotes



- On/off (open/close) for two groups of lights/shades
- Light, shade, or light/shade icon labeling

#### Pico wireless remotes

##### 4-button scene

|              |                                      |
|--------------|--------------------------------------|
| Light icon   | PJ2-4B-G <b>XX</b> <sup>1</sup> -L31 |
| Light custom | PJ2-4B-G <b>XX</b> <sup>1</sup> -EL2 |
| Shade icon   | PJ2-4B-G <b>XX</b> <sup>1</sup> -S31 |
| Shade custom | PJ2-4B-G <b>XX</b> <sup>1</sup> -ES2 |

#### Caséta Wireless Pico wireless remote PRO

##### 4-button scene (3-scene control)

|            |                                      |
|------------|--------------------------------------|
| Light icon | PJ2-4B- <b>XX</b> <sup>1</sup> -L31P |
|------------|--------------------------------------|

#### Pico wireless remotes

##### 4-button 2-group

|                  |                                       |
|------------------|---------------------------------------|
| Light icon       | PJ2-4B-G <b>XX</b> <sup>1</sup> -L21  |
| Shade icon       | PJ2-4B-G <b>XX</b> <sup>1</sup> -S21  |
| Light/shade icon | PJ2-4B-G <b>XX</b> <sup>1</sup> -LS21 |

#### Caséta Wireless Pico wireless remote PRO

##### 4-button 2-group (switch control)

|            |                                      |
|------------|--------------------------------------|
| Light icon | PJ2-4B- <b>XX</b> <sup>1</sup> -L21P |
|------------|--------------------------------------|

**XX**<sup>1</sup>: Available in Gloss White (WH), Black (BL), Ivory (IV), and Light Almond (LA)



## 4-button zone wireless remotes



- On/off and raise/lower
- Light or shade icon labeling
- Custom labeling available

### Pico wireless remotes

#### 4-button zone

|              |  |
|--------------|--|
| Light icon   | PJ2-4B-G <del>XX</del> <sup>1</sup> -L01 |
| Light custom | PJ2-4B-G <del>XX</del> <sup>1</sup> -EL1 |
| Shade icon   | PJ2-4B-G <del>XX</del> <sup>1</sup> -S01 |
| Shade custom | PJ2-4B-G <del>XX</del> <sup>1</sup> -ES1 |

### Caséta Wireless Pico wireless remote PRO

#### 4-button zone (dimming control)

|            |  |
|------------|--|
| Light icon | PJ2-4B- <del>XX</del> <sup>1</sup> -L01P |
|------------|--|

- ~~XX~~<sup>1</sup>**: Available in Gloss White (WH), Black (BL), Ivory (IV), and Light Almond (LA)
- ~~XXX~~<sup>2</sup>**: Available in Matte Arctic White (TAW), and Black (TBL)
- ~~XX~~<sup>3</sup>**: Available in Bright Chrome (BC), Satin Nickel (SN), and Satin Brass (SB)
- ~~XXX~~<sup>4</sup>**: Available in Green Glass (GWH) and Clear Glass (CWH)
- ~~XX~~<sup>5</sup>**: Available in Gloss White (WH) and Black (BL)

### Accessories

#### Screw-mount kit

|              |             |
|--------------|-------------|
| Mounting kit | PICO-SM-KIT |
|--------------|-------------|

Kit recommended for standalone mounting; includes screws to be used for permanent mounting and/or mounting to non-smooth surfaces.

#### Wallbox adapter

|         |                |
|---------|----------------|
| Adapter | PICO-WBX-ADAPT |
|---------|----------------|

Adapter allows the Pico wireless remote to be installed over an existing wallbox.

Adapter to be used with Claro wallplates.

#### Pico wallplates

|                  |                                      |
|------------------|--------------------------------------|
| Single wallplate | LPFP-S1- <del>XXX</del> <sup>2</sup> |
|                  | LPFP-S1- <del>XX</del> <sup>3</sup>  |
| Double wallplate | LFGP-S1- <del>XXX</del> <sup>4</sup> |
|                  | LPFP-S2- <del>XXX</del> <sup>2</sup> |
|                  | LPFP-S2- <del>XX</del> <sup>3</sup>  |
|                  | LFGP-S2- <del>XXX</del> <sup>4</sup> |

Pico wallplates are designed to provide a clean architectural look. Pico wireless remotes mount flush with the wallplate. Wallplates include wallbox adapter.

Arctic White and Glass finish wallplates include white plastic trim adapter visible from side.

Black and Metal finish wallplates include black plastic trim adapter, visible from side.

#### Tabletop pedestals

|                 |                                    |
|-----------------|------------------------------------|
| Single pedestal | L-PED1- <del>XX</del> <sup>5</sup> |
| Dual pedestal   | L-PED2- <del>XX</del> <sup>5</sup> |
| Triple pedestal | L-PED3- <del>XX</del> <sup>5</sup> |
| Quad pedestal   | L-PED4- <del>XX</del> <sup>5</sup> |

#### Car visor clip

|      |               |
|------|---------------|
| Clip | PICO-CAR-CLIP |
|------|---------------|