PANEL1X4 INSTALLATION INSTRUCTIONS



Access Plate Screw

Housing

Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RAB fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

Make certain power is OFF before installing or maintaining fixture.

SAFETY INSTRUCTIONS

WARNING: Risk of fire or electric shock. Suitable for Damp locations.

WARNING: Suitable for 9/16" or 15/16" Flat Tee Grid in both Insulated Ceilings and Non-Insulated Ceilings. Access above ceiling required.

WARNING: Do not handle energized fixture when hands are wet, when standing on wet or damp surfaces, or in water.

WARNING: Vapor barrier must be suitable for 90°C.

WARNING: Fixture to be independently supported to building structure.

RECESSED CEILING MOUNTING

The fixture is suitable only for INDOOR RECESSED CEILING application. Above ceiling access required.

To mount in an insulated or non-insulated ceiling - 9/16" or 15/16" exposed Flat Tee Grid Ceiling follow the steps below.

- Rotate and slide the **Housing** as required to fit through the **Tee-Grid Bar** and place it as indicated by the directional arrow in figure.
- 2. Firmly bend the pre-installed **Grid Clips** (4) against the **Tee-Grid Bar** to secure the **Housing**.
- Support wires are required by Installation Codes.
 Support the Housing to the building structure by
 Support Wires (supplied by others) through the Grid Clip Hole.
- Make sure that the orientation of the Splice Box and Access Plate faces an accessible tile to make electrical splices.
- Loosen Access Plate Screw and remove the Access Plate. Knock out appropriate Conduit Knockouts on the Access Plate to route input conduit. Use appropriate conduit connectors as required by code.
- Connect wires as shown in wiring diagram. Push all
 wires back into the Splice Box. Be careful not to pinch
 wires. WARNING: To prevent wiring damage or
 abrasion, do not expose wiring to edges of sheet
 metal or other sharp objects.
- 7. Replace Access Plate and tighten Access Plate Screw.

Splice Box Tee-Grid Bar **Grid Clip Access Plate** Conduit Knockouts **Tee-Grid Bar** Firmly bend Grid Clips against the Housing Tee-Grid Bar Support Wire (supplied by Power others) Feed **Grid Clip** Hole Grid

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation, operation or maintenance.

PANEL1X4 INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

ON-OFF WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For Non-Dimming, follow the wiring directions as in fig. 1.

- 1. Connect the black fixture lead to the (+) LINE supply lead.
- 2. Connect the white fixture lead to the (-) COMMON supply lead.
- 3. Connect the GROUND wire from fixture to supply ground.




Fig. 1

CLEANING & MAINTENANCE

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

- Clean acrylic lens & fixture with non-abrasive cleaning solution.
- 2. Do not open fixture to clean the LEDs. Do not touch the LEDs.


TROUBLESHOOTING

- 1. Check that the line voltage at fixture is correct. Refer to wiring directions.
- 2. Is the fixture grounded properly?

0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. 0-10V control wires must be rated for 300V minimum. For 0-10V Dimming, follow the wiring directions as in fig. 2.

- 1. Connect the black fixture lead to the (+) LINE supply lead.
- Connect the white fixture lead to the (-) COMMON supply lead.
- Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
- 4. Connect the purple fixture lead to the (V+) DIM lead.
- 5. Connect the gray fixture lead to the (V-) DIM lead.
- 6. Cap the yellow fixture lead. Do NOT connect.

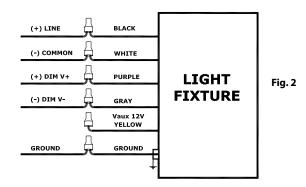

PANEL1X4-34Y 3000K



Visit www.lightingfacts.com for the Label Reference Guide.

Model Number: PANELTX4-317

Type: Lummure - Trotter, 3nd Centro

PANEL1X4-34YN 3500K



Visit www.lightingfacts.com for the Label Reference Guide.

Registration Number: W//MA-10PXMQ (11/5/2013) Model Number: PANEL1X4-34YN Type: Lummare - Troffer/God Centing PANEL1X4-34N



Visit www.lightingfacts.com for the Label Reference Guide.

Registration Number: WVMA-MG4PGL (116/201)
Model Number: PANEL1X4-34N
Type: Lumpaire - TrofferCord Ceduro.

PANEL1X4 INSTALLATION INSTRUCTIONS



Thank you for buying RAB lighting fixtures. Our goal is to design the best quality products to get the job done right. We'd like to hear your comments. Call the Marketing Department at 888-RAB-1000 or email: marketing@rabweb.com

PANEL1X4-41Y 3000K



PANEL1X4-41YN 3500K



PANEL1X4-41N 4000K




PANEL1X4-52Y 3000K



Visit www.lightingfacts.com for the Label Reference Guide.

PANEL1X4-52YN 3500K

Type: Lummare - Trotter-3nd Centry

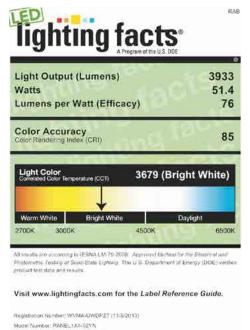

PANEL1X4-52N 4000K





Registration Number: WV/MA-7AN3J5 (11/6/2013)

Model Number: PANEL1X4-52Y

Type: Lummare - TrofferGod Cennig

Easy Installation & Product Help

Type: Lummare - Trotter-God Cennig