


Catalog Number • Numéro de Catalogue • Número de Catálogo: CH-250

Country of Origin: Made in China • Pays d'origine: Fabriqué en Chine • País de origen: Hecho en China

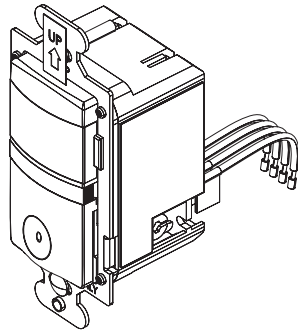

SPECIFICATIONS

Voltage	120VAC, 60Hz
Load (Multi-Way)	
Incandescent or fluorescent	0-600 Watts
Fan motor	1/6 hp
Time Delay Adjustment ..	15 sec., 5 min., 15 min., 30 min.
Environment	Indoor use only
Operating Temperature	32° to 131°F (0° to 55°C)
Humidity	95% RH, non-condensing
Tools Needed	
Insulated Screwdriver	
Wire Strippers	

DESCRIPTION AND OPERATION

CH-250 Multi-Way Wall Switch Vacancy Sensors are designed to replace standard single pole and multi-way (3-way, 4-way) switches. They are ideal for any room with multiple entries, and any other indoor space where vacancy sensor-based control with manual **ON/OFF** capability are desirable.

Like standard switches, you can press the **ON/OFF** button to turn the light or fan (controlled load) **ON** and **OFF**. Unlike standard switches, the CH-250 automatically turns **OFF** the controlled load after the coverage area has been vacant for a period of time (Time Delay). If motion is detected within 30 seconds after it automatically turns **OFF**, the CH-250 automatically turns the load back **ON**.

The CH-250 can be wired with up to three additional CH-250s for multi-way **Manual ON/OFF** of one or several loads (up to one load connected to each CH-250). It can also be wired to up to four RH-253 single pole momentary wall switches for multi-way **Manual-ON/OFF Automatic-OFF** control of one load.

Lighted Switch

To help you locate the CH-250 in a dark room, the amber LED illuminates the **ON/OFF** button while the controlled load is **OFF**. When the controlled load is **ON**, the LED is **OFF**.

Time Delay

The CH-250 keeps the load **ON** until no motion is detected by any of the related CH-250s for the time delay period. The time delay can be selected by the user during set up. It can be adjusted to any of these fixed values: 15 seconds/5 minutes/15 minutes/30 minutes. We recommend that the time delay be the same in all sensors related to the same load. This makes it easier to understand the multi-way control operation as well as trouble shooting. For additional information on how to adjust it, please read the **SENSOR ADJUSTMENT** section of this installation manual.

Coverage Area

The CH-250 has a maximum coverage range of 180 degrees and a coverage area of 600 square feet (56 square meters). The sensor must have a clear and unobstructed view of the coverage area. Objects blocking the sensor's lens may prevent detection thereby causing the light to turn **OFF** even though someone is in the area.

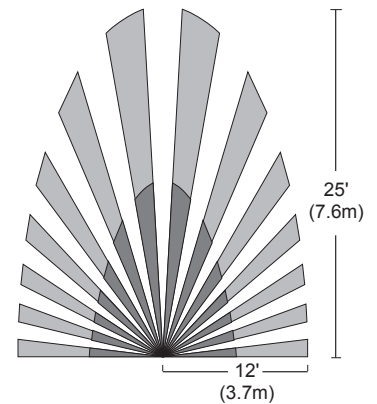


Fig. 1: Sensor Coverage Area

Windows, glass doors, and other transparent barriers will obstruct the sensor's view and prevent detection.

INSTALLATION AND WIRING

These instructions describe only the 3-way circuit applications. For information about other applications, consult technical support.

1. Prepare the switch box.

After the power is turned **OFF** at the circuit breaker box, remove the existing wall plate and mounting screws. Pull the old switch out from the wall box.

2. Identify the type of circuit.

You may connect the CH-250 to a single pole or multi-way circuit. If you are unable to clearly identify some or all of the wires mentioned in this manual, you should consult with a qualified electrician.

In a 3-way circuit (see Fig. 2), two traveler wires connect to both switches. Another wire provides power from the circuit box to one of the switches. A wire connects from one switch to the load. A ground wire may also be connected to a ground terminal on the old switches. A neutral wire should also be present in both wall boxes.

CAUTION: For your safety: Connecting a proper ground to the sensor provides protection against electrical shock in the event of certain fault conditions. If a proper ground is not available, consult with a qualified electrician before continuing installation.

3. Prepare the Wires.

Tag the wires currently connected to the existing switch so that they can be identified later. Disconnect the wires. Make sure the insulation is stripped off of the wires to expose their copper cores to the length indicated by the “Strip Gage,” in Fig. 3. (approx. 1/2 inch).

4. Wire the sensor.

Twist the existing wires together with the wire leads on the CH-250 sensor(s) as indicated in either figures 4a and 4b or figures 5a and 5b. Cap wires securely using wire nuts.

Wiring two CH-250s in a 3-way configuration

- Connect the green or non-insulated (copper) GROUND wire from the circuit to the green terminal on each CH-250.
- Connect the NEUTRAL wire from the circuit and from the lamp (LOAD) to the white wire on the master CH-250.
- The term “master” designates the CH-250 that connects to the load.
- Connect the NEUTRAL wire from the circuit in the other wiring box to the white wire on the auxiliary CH-250.
- Connect the power wire from the circuit box (HOT) to the black wire on the auxiliary CH-250 and to the TRAVELER 1 wire.
- Connect the TRAVELER 1 wire from the black wire of the auxiliary CH-250 to the black wire of the master CH-250.
- Connect the lamp power (LOAD) to the red wire on the master CH-250.
- Cap the red wire on the auxiliary CH-250.
- Connect the TRAVELER 2 wire coming from the yellow wire of another CH-250 to the yellow wire of the CH-250 that you are wiring.

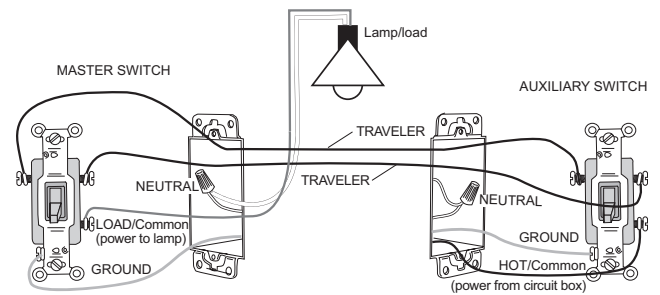
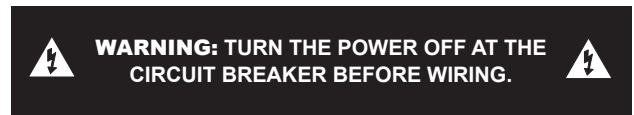


Fig. 2: Typical 3-Way Switch Wiring

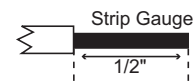


Fig. 3: Wire Stripping

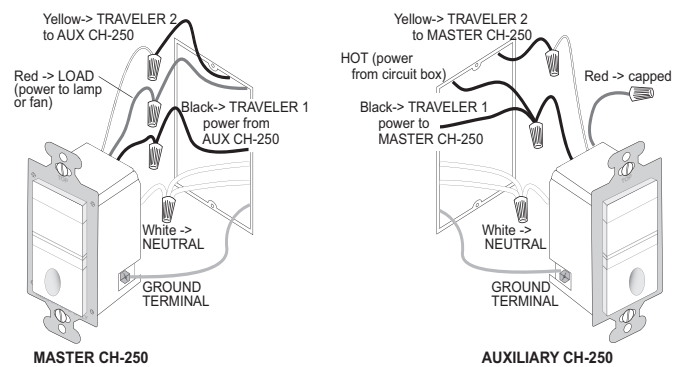


Fig. 4a: Sensor orientation, wire connections, and wall box assembly

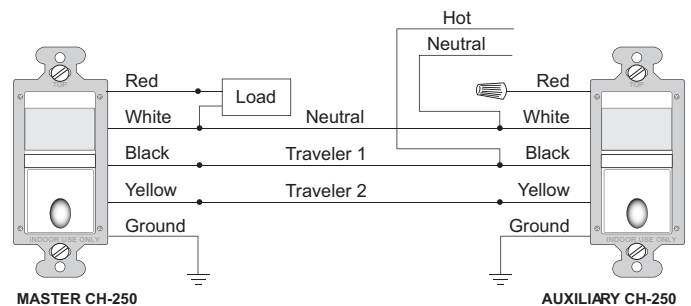


Fig. 4b: Step 4a. Reference wiring diagram

Wiring one CH-250 and one RH-253 single pole momentary switch for multi-way Manual-ON/OFF single load control.

IMPORTANT: The CH-250 must be installed in the wiring wall box that connects to the load.

- Connect the green or non-insulated (copper) GROUND wire in each wiring box to the green terminal on each CH-250 and RH-253.
 - Connect the NEUTRAL wire from the circuit and from the lamp (LOAD) to the white wire on the CH-250.
 - Connect the power wire from the circuit box (HOT) to one terminal of the RH-253 single pole momentary wall switch and to the TRAVELER 1 wire.
 - Connect the TRAVELER 1 wire coming from the RH-253 wiring box to the black wire of the CH-250.
 - Connect the lamp power (LOAD) to the red wire on the CH-250.
 - Connect the TRAVELER 2 wire to the other side of the RH-253 single pole momentary wall switch and to the yellow wire of the CH-250.
5. Put all the new switches into their wall boxes. Position the CH-250 switch(es) with the lens above the **ON/OFF** button (lens at top, **ON/OFF** button at bottom). Use the captive screws on the mounting strap to secure the switches to their wall boxes.
 6. Restore power to the circuit. Turn on the breaker or replace the fuse.
 7. Make any necessary adjustments. See the **SENSOR ADJUSTMENT** section for information.
 8. Install cover plate. Install industry standard decorator wall switch cover plate (not included).

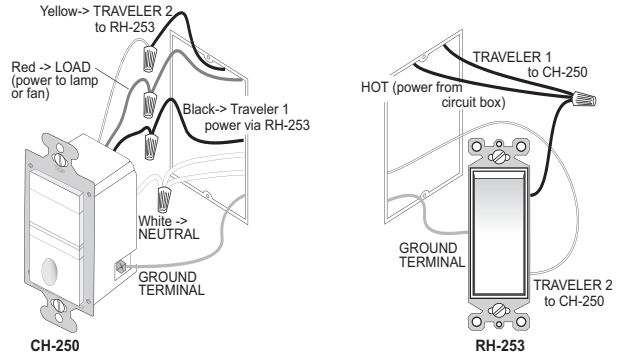


Fig. 5a: Sensor orientation and wire connections for 3-way operation with an RH-253 momentary wall switch

To wire up to four RH-253 single pole momentary wall switches to one CH-250, wire them in parallel as shown in the following wiring diagram.

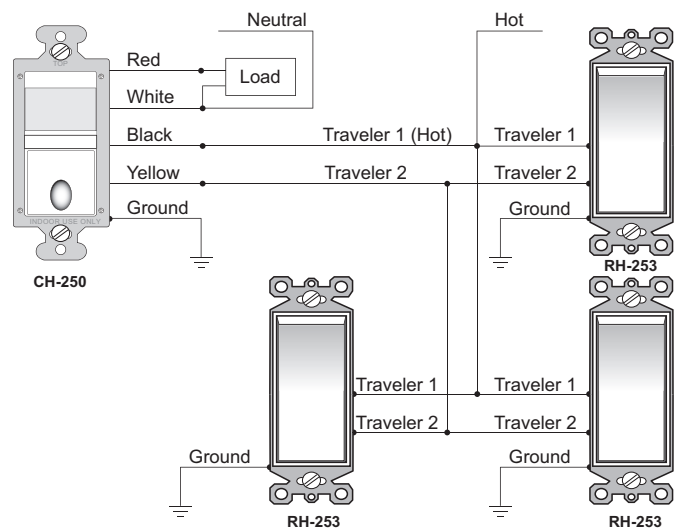


Fig. 5b: Reference wiring diagram for multi-way operation with RH-253 momentary wall switches (4 maximum)

SENSOR ADJUSTMENT

To adjust the CH-250, you use a control located under the **ON/OFF** button. The wall switch cover plate must be removed to gain access to the time delay adjustment dial under the **ON/OFF** button.

For multi-way operation, the Time Delay should be the same in all sensors related to the same load.

1. Firmly grasp the side edges of the Lock Bar and gently pull it away from the switch face until it clicks. Do NOT attempt to pull the Lock Bar off of the switch!
2. Firmly grasp the side edges of the **ON/OFF** button. Slide the button downward approximately 1/2 inch to expose the adjustment dial.

Adjusting the Time Delay

Turn the dial counter-clockwise to reduce the amount of time the lights will remain **ON** after the last motion detection (minimum = 15 seconds). Turn it clockwise to increase the time delay (maximum = 30 minutes). You can only select the following values: 15 seconds/5 minutes/15 minutes/30 minutes.

Warning: Do not overturn the Time Delay adjustment dial!

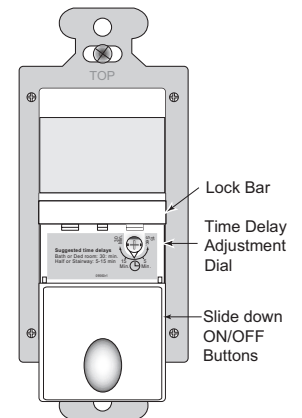


Fig. 6: Sensor Adjustment Control

TEST MODE

To test the detection coverage:

1. Press and hold the **ON/OFF** button.

After 10 seconds the lighted switch turns off. The load turns **ON** if it was not already **ON**. The sensor is now in a TEST mode that lasts 5 minutes. (You can end the TEST mode sooner by pressing the **ON/OFF** button for another 10 seconds).

During the TEST mode, the controlled load turns ON for 5 seconds each time the sensor that initiated the TEST mode detects occupancy.

2. Move out of the coverage area or stand very still. The controlled load turns **OFF** after 5 seconds if no motion is detected.
3. Move into the coverage area for the unit that initiated the TEST mode. The controlled load turns **ON** for 5 seconds each time the sensor detects motion. After 5 seconds expire without motion detection, the load turns **OFF**. The controlled load turns **ON** automatically with the next motion detection and stays **ON** for 5 seconds.
4. Repeat as necessary to ensure that the desired coverage areas are within detection range.

You can do this test for each CH-250 in your multi-way configuration. So that you can determine the actual coverage area for each multi-way switch individually, only the CH-250 that is in TEST mode will control the load.

TROUBLESHOOTING

Lighted switch is OFF, no load response to ON/OFF button press:

- Make certain that the circuit breaker is **ON** and functioning.

Lighted switch is ON, no load response to ON/OFF button press:

- Check the lamp and/or motor switch on the fan mechanism.

Load will not turn OFF automatically:

- Press **ON/OFF** button. If the controlled load turns **OFF**, go to next step.
 - The time delay can be set from 15 seconds to 30 minutes. Check the time delay setting for each CH-250 in your multi-way configuration. Ensure that all CH-250s have the same time delay setting.
 - Ensure that there is no movement within the coverage area for all the sensors related to the load for the set time delay. Hot air currents and heat radiant devices can cause false detection. Make sure the sensor is at least 6 feet (2 meters) away from devices that are a significant heat source (e.g., heater, heater vent, high wattage light bulb).
-

If load does not respond properly after following troubleshooting, turn OFF power to the circuit then check wire connections or call technical support.

COVER PLATES

Wattstopper CH wall switches fit behind industry standard decorator style switch cover plates.

WARRANTY INFORMATION

Wattstopper warrants its products to be free of defects in materials and workmanship for a period of five (5) years. There are no obligations or liabilities on the part of Wattstopper for consequential damages arising out of, or in connection with, the use or performance of this product or other indirect damages with respect to loss of property, revenue or profit, or cost of removal, installation or reinstallation.

INFORMATIONS RELATIVES À LA GARANTIE

Wattstopper garantit que ses produits sont exempts de défauts de matériaux et de fabrication pour une période de cinq (5) ans. Wattstopper ne peut être tenu responsable de tout dommage consécutif causé par ou lié à l'utilisation ou à la performance de ce produit ou tout autre dommage indirect lié à la perte de propriété, de revenus, ou de profits, ou aux coûts d'enlèvement, d'installation ou de réinstallation.

INFORMACIÓN DE LA GARANTÍA

Wattstopper garantiza que sus productos están libres de defectos en materiales y mano de obra por un período de cinco (5) años. No existen obligaciones ni responsabilidades por parte de Wattstopper por daños consecuentes que se deriven o estén relacionados con el uso o el rendimiento de este producto u otros daños indirectos con respecto a la pérdida de propiedad, renta o ganancias, o al costo de extracción, instalación o reinstalación.
